

**axial**  
www.axialracing.com

1/6th SCALE READY-TO-RUN

# SCX6™ TRAIL HONCHO™ 4WD



Scan the QR code and select the Manuals and Support quick links from the product page for the most up-to-date manual information.

Scannen Sie den QR-Code und wählen Sie auf der Produktseite die Quicklinks Handbücher und Unterstützung, um die aktuellsten Informationen zu Handbüchern.

Scannez le code QR et sélectionnez les liens rapides Manuals and Support sur la page du produit pour obtenir les informations les plus récentes sur le manuel.

Scannerizzare il codice QR e selezionare i Link veloci Manuali e Supporto dalla pagina del prodotto per le informazioni manuali più aggiornate.



AXI05001T1/T2

**INSTRUCTION MANUAL**  
**BEDIENUNGSANLEITUNG**  
**MANUEL D'UTILISATION**  
**MANUALE DI ISTRUZIONI**

Before operating this vehicle, please read all printed materials thoroughly. Horizon Hobby is not responsible for inadvertent errors in this manual.

**HORIZON**  
H O B B Y

## NOTICE

All instructions, warranties and other collateral documents are subject to change at the sole discretion of Horizon Hobby, LLC. For up-to-date product literature, visit [horizonhobby.com](http://horizonhobby.com) or [towerhobbies.com](http://towerhobbies.com) and click on the support or resources tab for this product.

## MEANING OF SPECIAL LANGUAGE

The following terms are used throughout the product literature to indicate various levels of potential harm when operating this product:

**WARNING:** Procedures, which if not properly followed, create the probability of property damage, collateral damage, and serious injury OR create a high probability of superficial injury.

**CAUTION:** Procedures, which if not properly followed, create the probability of physical property damage AND a possibility of serious injury.

**NOTICE:** Procedures, which if not properly followed, create a possibility of physical property damage AND a little or no possibility of injury.

 **WARNING:** Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury.

This is a sophisticated hobby product. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this Product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. Do not use with incompatible components or alter this product in any way outside of the instructions provided by Horizon Hobby, LLC. This manual contains instructions for safety, operation and maintenance. It is essential to read and follow all the instructions and warnings in the manual, prior to assembly, setup or use, in order to operate correctly and avoid damage or serious injury.

**Age Recommendation: Not for children under 14 years. This is not a toy.**

## SAFETY PRECAUTIONS AND WARNINGS

As the user of this product, you are solely responsible for operating in a manner that does not endanger yourself and others or result in damage to the product or property of others.

This model is controlled by a radio signal subject to interference from many sources outside your control. This interference can cause momentary loss of control, so it is advisable to always keep a safe distance in all directions around your model as this margin will help avoid collisions or injury.

- Never operate your model with low transmitter batteries.
- Always operate your model in open spaces away from full-size vehicles, traffic and people.
- Never operate the model in the street or in populated areas for any reason.
- Carefully follow the directions and warnings for this and any optional support equipment (chargers, rechargeable battery packs, etc.) you use.
- Keep all chemicals, small parts and anything electrical out of the reach of children.
- Never lick or place any portion of the model in your mouth as it could cause serious injury or even death.
- Exercise caution when using tools and sharp instruments.
- Take care during maintenance as some parts may have sharp edges.
- Immediately after using your model, do NOT touch equipment such as the motor, electronic speed control and battery, because they generate high temperatures. You may burn yourself seriously touching them.
- Do not put fingers or any objects inside rotating and moving parts, as this may cause damage or serious injury.
- Always turn on your transmitter before you turn on the receiver in the car. Always turn off the receiver before turning your transmitter off.
- Keep the wheels of the model off the ground when checking the operation of the radio equipment.

 **WARNING AGAINST COUNTERFEIT PRODUCTS:** Always purchase from a Horizon Hobby, LLC authorized dealer to ensure authentic high-quality Spektrum product. Horizon Hobby, LLC disclaims all support and warranty with regards, but not limited to, compatibility and performance of counterfeit products or products claiming compatibility with DSM® or Spektrum technology.

## TABLE OF CONTENTS

Water-Resistant Vehicle With Waterproof Electronics.....	3	Vehicle Maintenance .....	9
Box Contents.....	4	ESC Operation.....	10
Required Equipment .....	4	ESC Programming.....	10
Recommended Tools .....	4	Gear Ratios.....	11
Getting Started Checklist.....	5	Troubleshooting.....	11
Vehicle Parts.....	5	Limited Warranty.....	12
Charge the Vehicle Battery .....	6	Warranty and Service Contact Information .....	13
Install the Transmitter Batteries.....	6	FCC Information.....	13
Transmitter Functions.....	6	IC Information.....	13
Adjusting the Vehicle Battery Tray.....	7	Compliance Information for the European Union .....	14
Install the Vehicle Battery .....	7	Exploded Views.....	54
Binding.....	8	Parts List.....	59
Range-Checking the Radio System .....	8	Electronics .....	61
Using the Two Speed transmission.....	8		

## WATER-RESISTANT VEHICLE WITH WATERPROOF ELECTRONICS

Your new Horizon Hobby vehicle has been designed and built with a combination of waterproof and water-resistant components to allow you to operate the product in many “wet conditions,” including puddles, creeks, wet grass, snow and even rain.

While the entire vehicle is highly water-resistant, it is not completely waterproof and your vehicle should NOT be treated like a submarine. The various electronic components used in the vehicle, such as the Electronic Speed Control (ESC), servo(s) and receiver are waterproof, however, most of the mechanical components are water-resistant and should not be submerged.

Metal parts, including the bearings, hinge pins, screws and nuts, as well as the contacts in the electrical cables, will be susceptible to corrosion if additional maintenance is not performed after running in wet conditions. To maximize the long-term performance of your vehicle and to keep the warranty intact, the procedures described in the “Wet Conditions Maintenance” section below must be performed regularly if you choose to run in wet conditions. If you are not willing to perform the additional care and maintenance required, then you should not operate the vehicle in those conditions.



**CAUTION:** Failure to exercise caution while using this product and complying with the following precautions could result in product malfunction and/or void the warranty.

### GENERAL PRECAUTIONS

- Read through the wet conditions maintenance procedures and make sure that you have all the tools you will need to properly maintain your vehicle.
- Not all batteries can be used in wet conditions. Consult the battery manufacturer before use. Caution should be taken when using Li-Po batteries in wet conditions.
- Most transmitters are not water-resistant. Consult your transmitter’s manual or the manufacturer before operation.
- Never operate your transmitter or vehicle where lightning may be present.
- Do not operate your vehicle where it could come in contact with salt water (ocean water or water on salt-covered roads), contaminated or polluted water. Salt water is very conductive and highly corrosive, so use caution.

- Even minimal water contact can reduce the life of your motor if it has not been certified as water-resistant or waterproof. If the motor becomes excessively wet, apply very light throttle until the water is mostly removed from the motor. Running a wet motor at high speeds may rapidly damage the motor.
- Driving in wet conditions can reduce the life of the motor. The additional resistance of operating in water causes excess strain. Alter the gear ratio by using a smaller pinion or larger spur gear. This will increase torque (and motor life) when running in mud, deeper puddles, or any wet conditions that will increase the load on the motor for an extended period of time.

### WET CONDITIONS MAINTENANCE

- Drain any water that has collected in the tires by spinning them at high speed. With the body removed, place the vehicle upside down and pull full throttle for a few short bursts until the water has been removed.



**CAUTION:** Always keep hands, fingers, tools and any loose or hanging objects away from rotating parts when performing the above drying technique.


- Remove the battery pack(s) and dry the contacts. If you have an air compressor or a can of compressed air, blow out any water that may be inside the recessed connector housing.
- Remove the tires/wheels from the vehicle and gently rinse the mud and dirt off with a garden hose. Avoid rinsing the bearings and transmission.

**NOTICE:** Never use a pressure washer to clean your vehicle.

- Use an air compressor or a can of compressed air to dry the vehicle and help remove any water that may have gotten into small crevices or corners.
- Spray the bearings, drive train, fasteners and other metal parts with a water-displacing light oil. Do not spray the motor.
- Let the vehicle air dry before you store it. Water (and oil) may continue to drip for a few hours.
- Increase the frequency of disassembly, inspection and lubrication of the following:
  - Front and rear axle hub assembly bearings.
  - All transmission cases, gears and differentials.
  - Motor—clean with an aerosol motor cleaner and re-oil the bushings with lightweight motor oil.


## BOX CONTENTS

- SCX6™ 1/6 Trail Honcho RTR
  - SR515 DSMR 5 CH Receiver (SPMSR515)
  - 1200Kv 1/6 Brushless Sensored Crawler Motor (SPMXSM3100)
  - 120A Crawl Smart Brushless Sensored ESC (SPMXSE1080)
  - Water Proof S905 Large Scale Servo 15T (SPMS905)
  - Water Proof Metal Gear Surface Servo (SPMS614)
- Spektrum™ DX3™ 2.4GHz Transmitter (SPM2340T)
- 4 AA Batteries

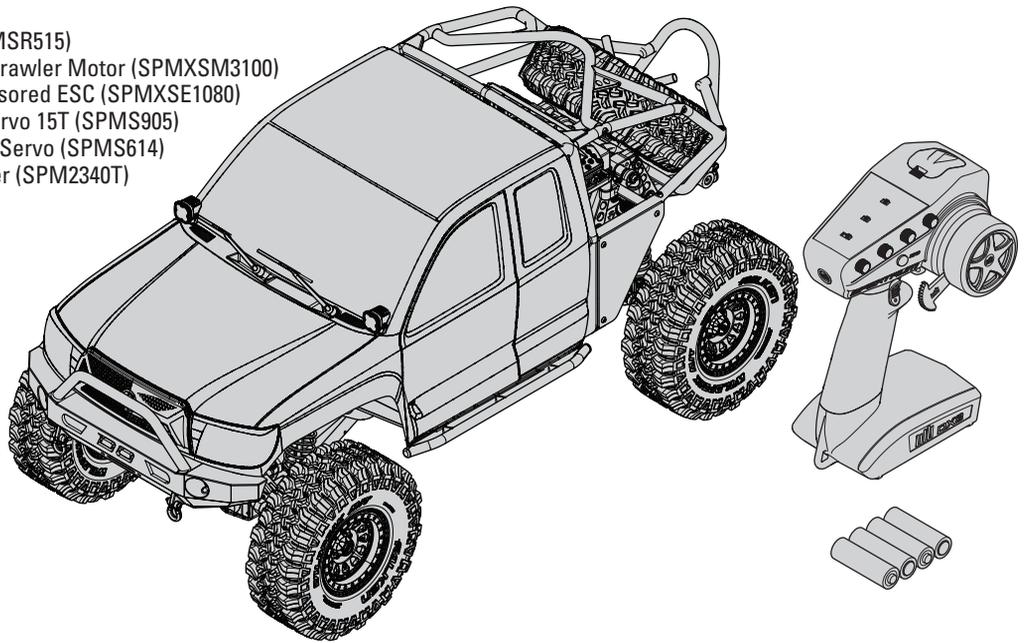


## REQUIRED EQUIPMENT


- 3S Standard or "Shorty" LiPo Battery (IC5® Connector Required)

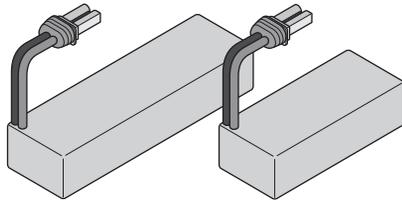


- Battery charger compatible with the chosen vehicle battery type

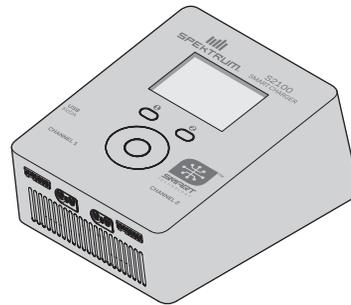


## RECOMMENDED TOOLS

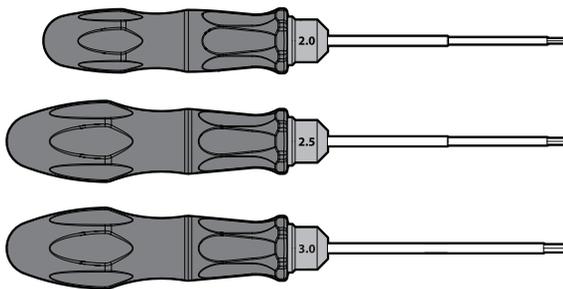


- Hex Drivers (2.0, 2.5, 3.0mm)

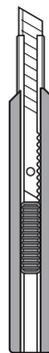


- Hobby Knife

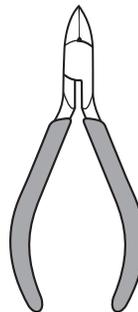

- Side Cutter

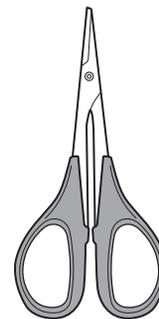

- Curved Scissors

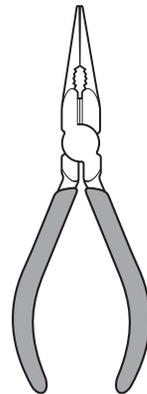


- Long-nose Plier

## GETTING STARTED CHECKLIST

Read the manual
Familiarize yourself with the vehicle and its components
Check all screws, especially the driveshaft setscrews, for tightness from the factory
Charge the vehicle battery
Install 4 AA batteries in the transmitter

Power on the transmitter
Install the vehicle battery in the vehicle
Check for proper function of the throttle and steering
Range check the radio system
Drive the vehicle, challenge yourself and have FUN!
Perform any necessary vehicle maintenance


## VEHICLE PARTS

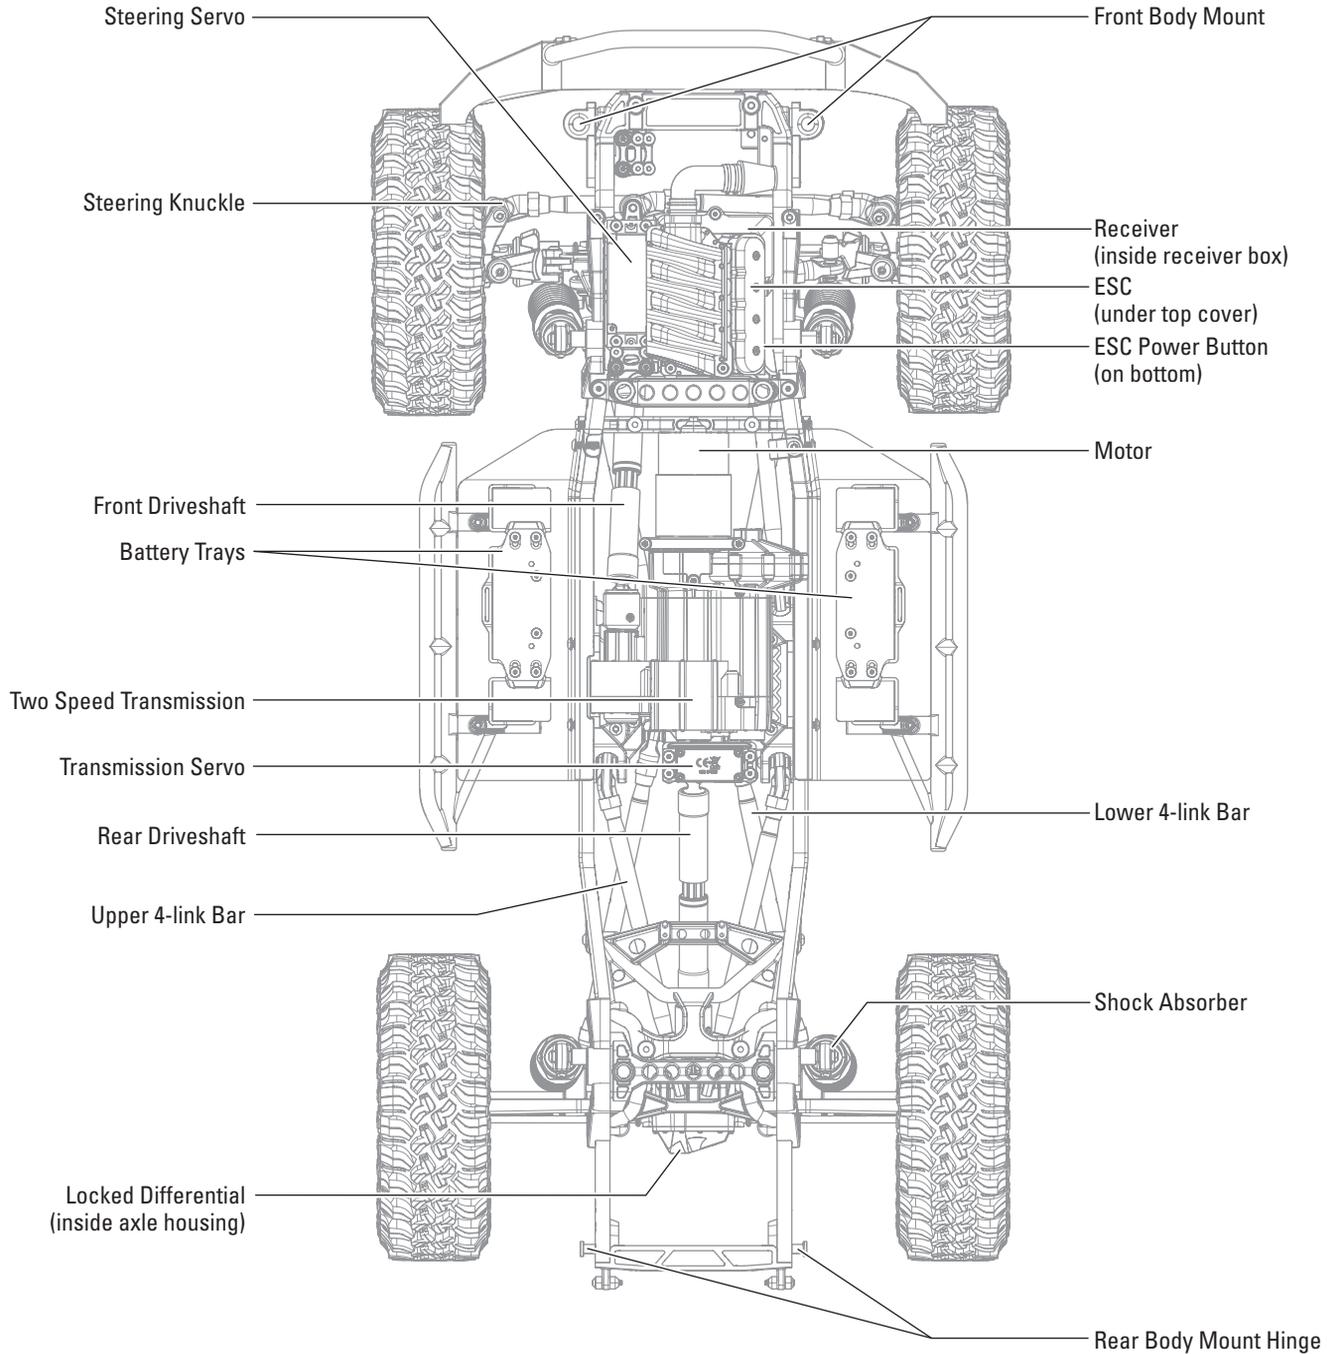

## CHARGE THE VEHICLE BATTERY

Follow the manufacturer's directions for your charger to properly charge the vehicle battery.

**CAUTION:** Only use chargers designed to charge the chosen battery type. Using an incorrect charger or incorrect charger settings could cause the battery to catch fire or explode.

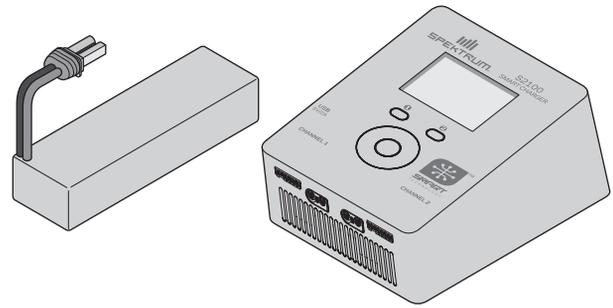

## INSTALL THE TRANSMITTER BATTERIES


This transmitter requires 4 AA batteries.

1. Remove the battery cover from the transmitter.
2. Install the batteries as shown.
3. Install the battery cover.

**CAUTION:** NEVER remove the transmitter batteries while the model is powered on. Loss of model control, damage, or injury may occur.

**CAUTION:** If using rechargeable batteries, charge only rechargeable batteries. Charging non-rechargeable batteries may cause the batteries to burst, resulting in injury to persons and/or damage to property.

**CAUTION:** Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to national regulations.

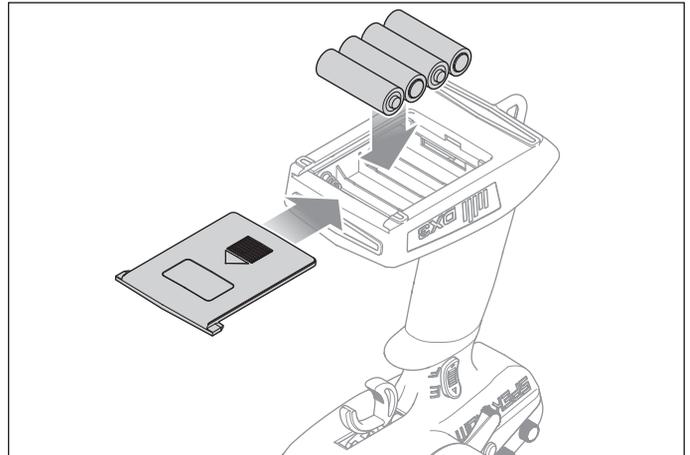

## TRANSMITTER FUNCTIONS

### A/B. Channel 3 Button (Two-Speed Function)

#### C. Throttle/Brake

#### D. Steering Wheel

#### E. Steering Rate

Adjusts the end point of the steering

#### F. Brake Rate

Adjusts the braking end point.

#### G. Steering Trim

Adjusts the steering center point. Normally, the steering trim is adjusted until the vehicle tracks straight.

#### H. Throttle Trim

Adjusts the throttle neutral point

#### I. SMART Battery Level Indicator

#### J. Servo Reversing

To reverse the Throttle (TH) or Steering (ST) channel, switch the position of the correlating switch—"N" is for normal, "R" is for reverse.

#### K. Throttle Limit

Limits throttle output to 50/75/100%


Select 50% or 75% for less experienced drivers or when you are driving the vehicle in a small area.

#### L. Power LED

- **Solid red lights:** Indicates radio connectivity and adequate battery power
- **Flashing red lights:** Indicates the battery voltage is critically low. Replace batteries

#### M. Power Button

#### N. Bind Button

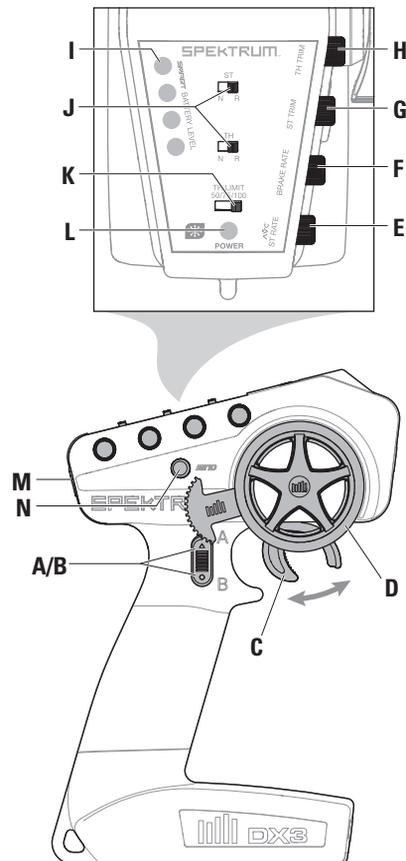


## ADJUSTING THE VEHICLE BATTERY TRAY

The battery trays may be adjusted to fit a wide range of battery sizes.

To adjust the battery tray:


1. Loosen the four flathead screws shown in the illustration.
2. Slide the ends of the battery tray in or out to fit the desired battery.
3. Tighten the four flathead screws. Do not over-tighten the screws.

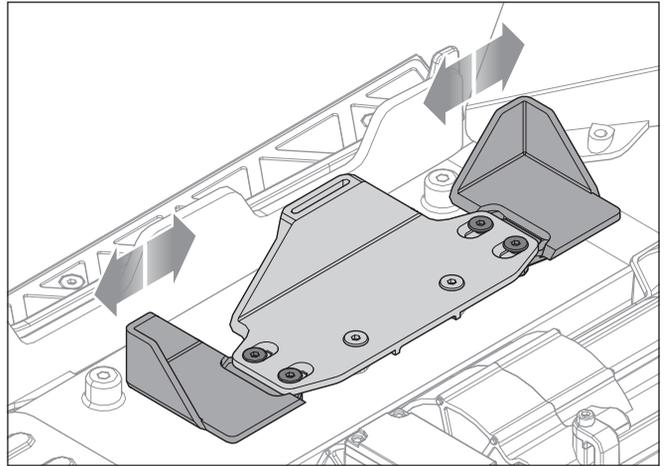


## INSTALL THE VEHICLE BATTERY

The following steps show the installation of a single standard size battery in the left battery tray of the vehicle.


Vehicle run time can be extended by installing a second battery pack in the opposite side battery tray, using a parallel y-harness (SPMXCA509). The other pack should be installed in the opposite side battery tray.

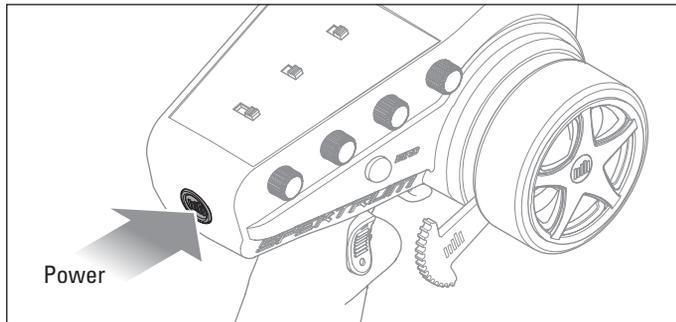


1. Power on the transmitter.

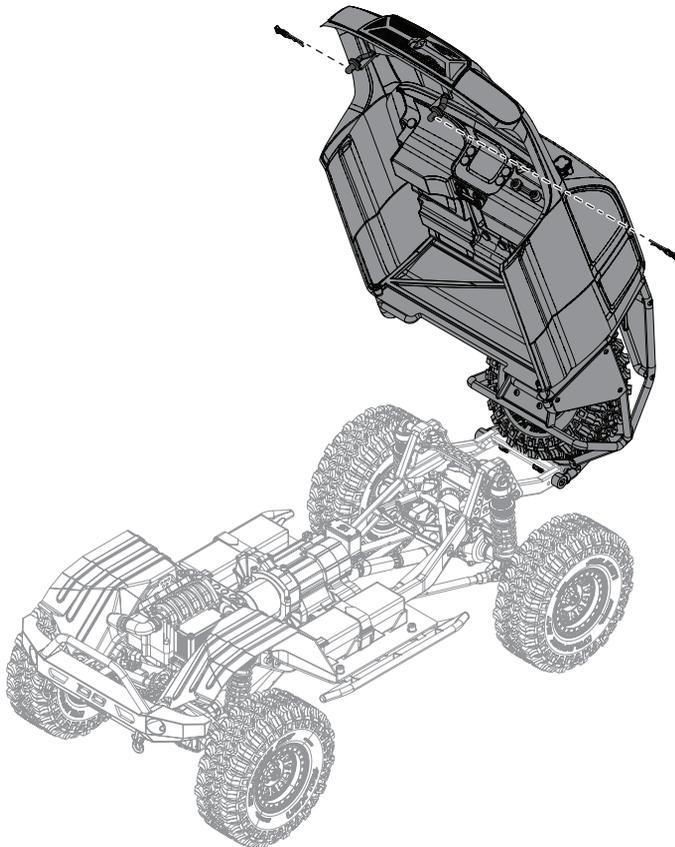

2. Remove the two body clips from under the body.
3. Lift the body from the chassis.

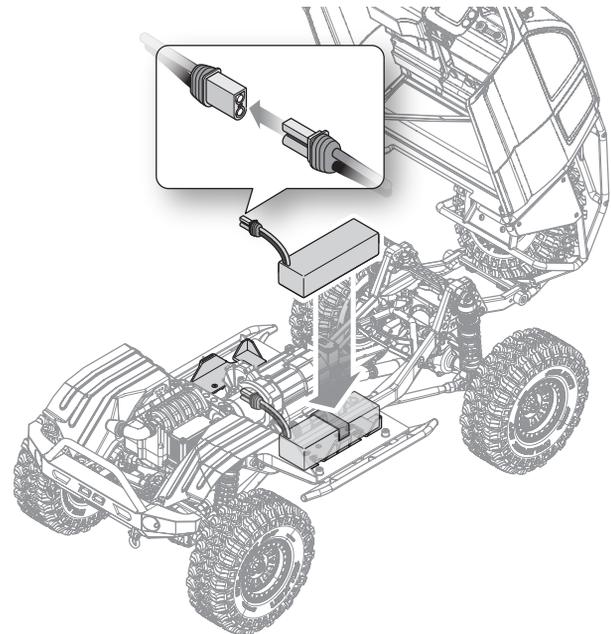

4. Place the battery in the battery tray. The battery tray length may be adjusted to fit the battery as described in the previous section.
5. Secure the battery to the tray with the hook and loop strap.
6. Connect the battery to the ESC.
7. Re-install the body and four body clips to the chassis.

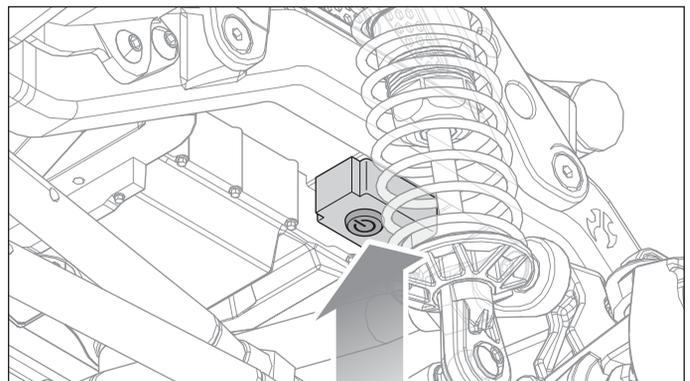

8. Power on the receiver/ESC by pressing the power button located on the bottom of the chassis, opposite the steering servo.


**NOTICE:** Always power off the ESC and disconnect the battery from the ESC before powering off the transmitter. Loss of vehicle control may result.

## BINDING

Binding is the process of programming the receiver to recognize the GUID (Globally Unique Identifier) code of a single specific transmitter. The transmitter and receiver are bound at the factory. If you need to rebind, follow the instructions below.

1. Connect a fully charged battery pack to the ESC/receiver.
2. Disconnect the two-speed transmission servo lead from the receiver.
3. Push and hold the receiver bind button.
4. Power on the vehicle.
5. Release the bind button after the receiver goes into bind mode, indicated by the flashing LED.
6. With the throttle trigger at neutral, press and hold the transmitter bind button while powering on to put the transmitter in bind mode. The throttle should be at neutral to set failsafe.
7. The bind process is complete when the LED on the receiver remains lit.
8. Connect the two-speed transmission servo lead to the receiver.

You must rebind when different failsafe positions are needed e.g., when throttle or steering reversing has been changed.

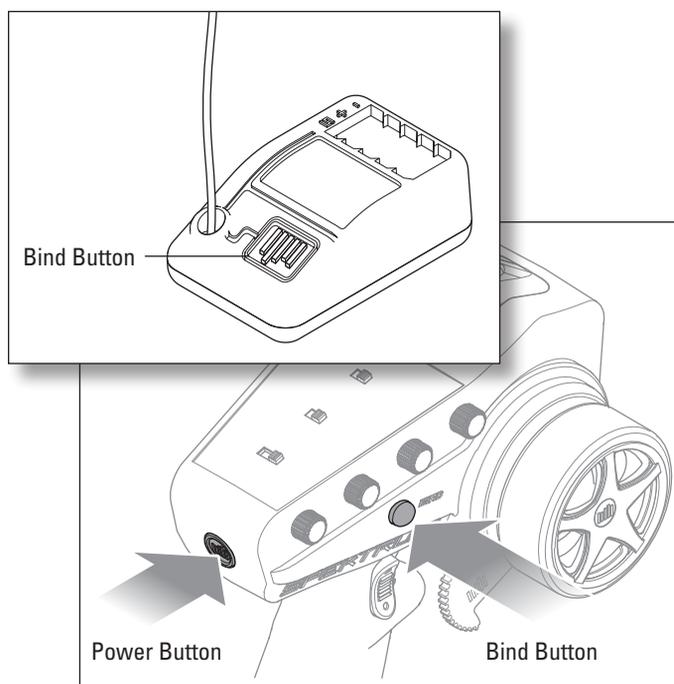

## RANGE-CHECKING THE RADIO SYSTEM

The radio system should be checked before operating the vehicle to ensure proper operation and adequate range.

1. Turn on the transmitter.
2. Connect the battery in the vehicle.
3. Have a friend hold the vehicle while keeping hands and loose clothing away from moving parts.
4. Walk away until you are at the maximum planned operating distance from the vehicle.
5. Turn the steering wheel side to side and operate the throttle, both forward and reverse, checking for any erratic behavior.
6. If any erratic behavior is exhibited, DO NOT operate the vehicle. Call customer service for assistance.




## USING THE TWO SPEED TRANSMISSION

The vehicle includes an installed two speed transmission, capable of changing speeds with the A/B switch on the transmitter.

To operate the two speed transmission:



1. Slow the vehicle to approximately 1 mph.
2. Toggle the A/B switch on the transmitter to change gears.

**NOTICE:** Do not attempt to change gears while the vehicle is either not moving or moving at a high rate of speed. Damage to the transmission gears or the transmission servo will result.

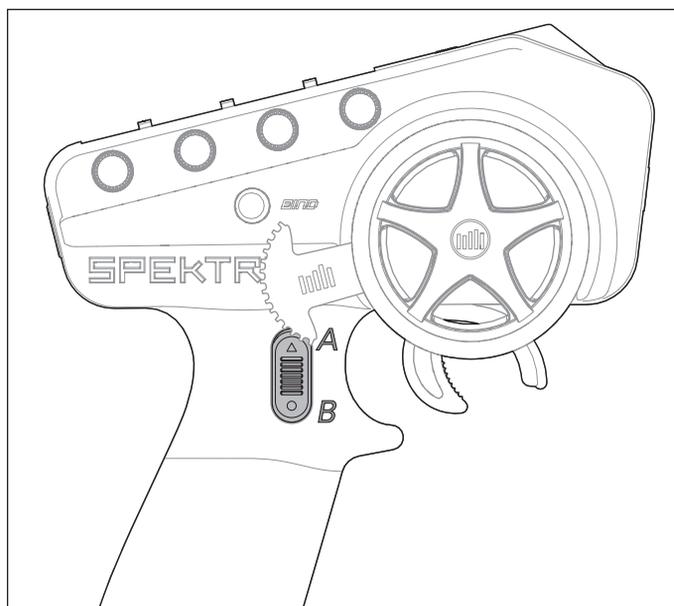


# VEHICLE MAINTENANCE


Just like a full size car or truck your RC vehicle must undergo periodic maintenance in order to ensure peak performance. Preventative maintenance will also help avoid needless breakages which could result in costly repairs. Below are some suggestions to properly maintain your vehicle.

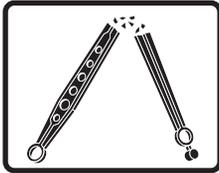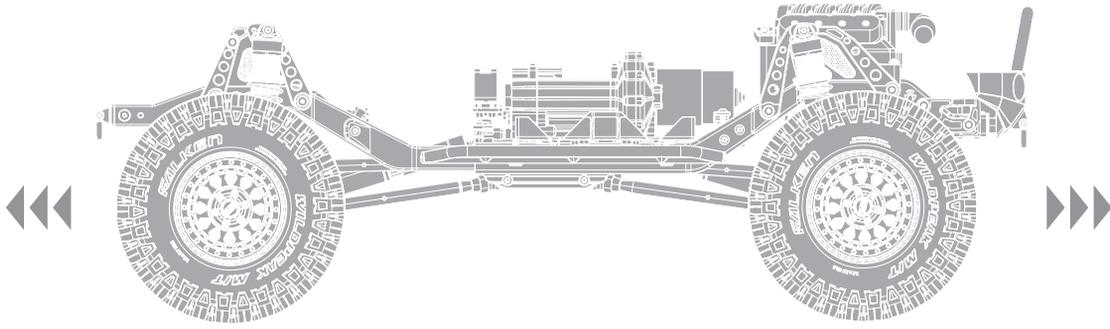


Replace any noticeable bent or broken parts

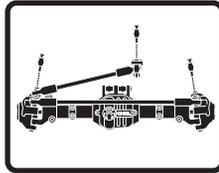


Check for wear on the ball joints in the steering and suspension links (replace if necessary)

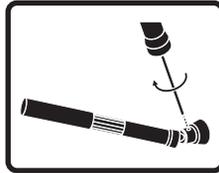


Check driveshaft set screws and apply thread locking compound if necessary

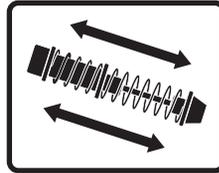


Inspect shock absorbers for smooth dampened operation

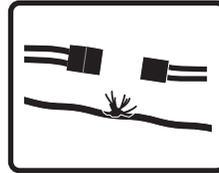


Check for any loose connections or frayed wiring

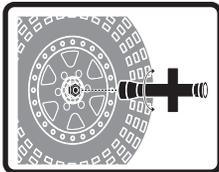


Check the wheel nuts for tightness

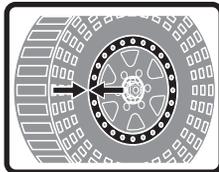


Ensure the wheel beads are still firmly bonded around the entire circumference of the rim

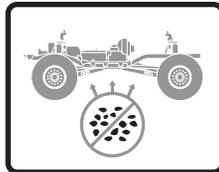


Keep the chassis free of dirt and debris

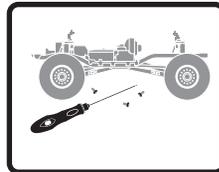


Check for loose screws on the chassis, especially the knuckle, C-hub and axle lockout screws

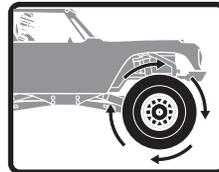


Check the driveline for smooth, binding free operation

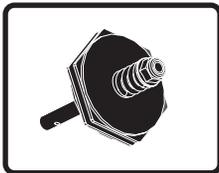


If applicable, check the slipper clutch for proper operation

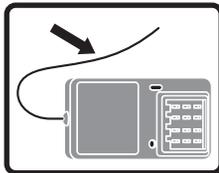


Check the receiver antenna for damage

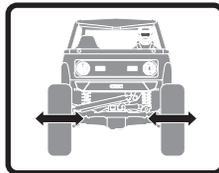

Check the steering operation for any binding

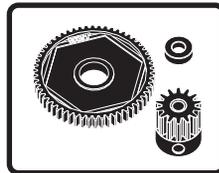

Inspect the spur and pinion gears for damage

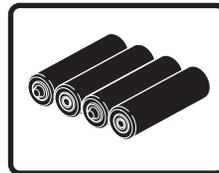


Replace the transmitter batteries when indicated by the transmitter, as described in the Transmitter Functions section

## ESC OPERATION

### SPECIFICATIONS

<b>Dimensions (L x W x H)</b>	47mm x 36mm x 24mm
<b>Weight</b>	4 oz (113.4g)
<b>Max Current</b>	120A
<b>Voltage Range</b>	Voltage Range 2-4S Lipo
<b>Servo Output Voltage (BEC)</b>	6 or 7.4V selectable, Continuous current of 6A
<b>Battery Input Connector</b>	IC5® (EC5™ compatible)
<b>Motor Connectors</b>	5mm Bullet

\*Default setting for low voltage cutoff is Li-Po.

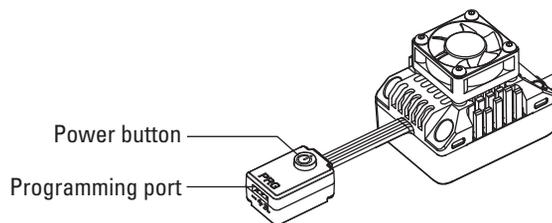

### ESC MOTOR PAIRING

In the event the motor has been subjected to a severe impact, is overheating or has abnormal power output, use the following process to automatically pair the motor to the ESC:

1. Disconnect the throttle lead from the receiver.
2. Remove the pinion gear from the motor.

**NOTICE:** Do not attempt to pair the ESC and motor without removing the pinion gear from the motor. Failure to remove the gear may result in the vehicle accelerating unexpectedly as well as incorrect pairing.

3. Connect a fully charged battery to the ESC.
4. Press and hold the power button. The red LED on the power button will flash, followed by a short double flash that repeats after approximately eight seconds.
5. Release the power button.
6. The motor will automatically rotate and the green LED on the ESC will flash. When the motor stops, the green LED will glow solid, indicating the pairing process is complete.
7. Power off the ESC.
8. Install the pinion gear to the motor.
9. Connect the throttle lead to the receiver.

	LED STATUS	INDICATION
<b>Normal Operation</b>	Red and Green LEDs off	Throttle is at neutral
	Red LED glows solid	Throttle is moved away from neutral, either forward or reverse/brake
<b>Error Codes</b>	Red LED single flashes continuously	Low voltage cutoff activated
	Green LED single flashes continuously	ESC thermal protection activated
	Green LED double flashes continuously	Motor thermal protection activated
	Red and Green LEDs flash continuously	Sensor error. Check the motor sensor wire connection

## TRANSMITTER AND ESC CALIBRATION

The transmitter throttle neutral, forward and brake/reverse positions must be calibrated prior to ESC operation. To calibrate the transmitter and ESC:

1. Power on the transmitter.
  2. Connect a fully charged battery to the ESC.
  3. Press and hold the ESC power button.
  4. Release the button when the red LED on the button flashes. The red LED on the ESC will start to flash.
  5. With the transmitter trigger in the neutral position, press the ESC power button to store the neutral position. The green LED on the ESC will flash once and the motor will emit a single tone, indicating the neutral position has been stored.
  6. Pull the transmitter trigger to full throttle, and press the ESC power button. The green LED on the ESC will flash twice, and the motor will emit two tones, indicating the full throttle position has been stored.
  7. Push the transmitter trigger fully forward to the full brake/reverse position, and press the ESC power button. The green LED on the ESC will flash three times and the motor will emit three tones, indicating the brake/reverse position has been stored.
- The ESC and motor can now be operated normally.

## ESC PROGRAMMING

### PROGRAMMING THE ESC WITH THE OPTIONAL SPMXCA200 SMART PROGRAMMER BOX

1. Connect the programming box to the switch.
2. Connect a battery to the ESC.
3. Power on the box and select the parameter with the SELECT button.
4. Change the values of the selected parameter with the EDIT button
5. Press the SAVE button to save the changes. The ESC requires a power cycle to implement the saved changes.

Programmable Item	Option 1	Option 2	Option 3	Option 4	Option 5	Option 6	Option 7	Option 8	Option 9	Option 10
1. Running Mode	<b>F/R</b>	F/R/B								
2. Cutoff Voltage	Disabled	Low	<b>Medium</b>	High						
3. RPM/ Throttle Matching	Low	<b>Medium</b>	High							
4. Max. Forward Force	25%	37.5%	50%	62.5%	75%	87.5%	<b>100%</b>			
5. Max. Reverse Force	25%	37.5	50%	62.5%	75%	87.5%	<b>100%</b>			
6. Turbo Timing	0° – 10°, Adjustable in 1° Increments (0° Default)									
7. Turbo Delay	<b>Off</b>	0.1s	0.2s	0.3s	0.4s	0.5s				
8. Drag Brake Force	50% – 200%, Adjustable in 5% Increments (Default: 80%)									
9. Drag Brake Rate	Level 1	Level 2	Level 3	<b>Level 4</b>	Level 5	Level 6	Level 7	Level 8	Level 9	Auto
10. Neutral Range	6% – 17%, Adjustable in 1% Increments (Default: 10%)									
11. Start Mode (Punch)	Level 1	Level 2	Level 3	Level 4	<b>Level 5</b>	Level 6	Level 7	Level 8	Level 9	
12. BEC Voltage	<b>6.0V</b>	7.4V								
13. Motor Rotation	<b>CW</b>	<b>CCW</b>								

Blacked out cells with white lettering represent the default settings.

- 1. Running Mode:** Select your running mode, Forward and Reverse without brake (F/R) is the preferred rock crawler mode. Select Forward Reverse and Brake (F/R/B) if you want to use reverse throttle input to control brakes.
- 2. Cutoff Voltage:** Low Voltage Cutoff (LVC) for Lipo Protection. This item is mainly for preventing LiPo packs from being over-discharged. If the LVC is enabled, the ESC will reduce the output to 50% and cut power 10 seconds later when the voltage goes below the cutoff threshold. The red LED will begin a repeating single flash when the ESC enters LVC.  
If the LVC is disabled, the ESC will not cut off the power when the voltage is low. We don't recommend setting the LVC to "Disabled" when using a LiPo pack, Without LVC it is easy for a LiPo battery to be damaged due to over-discharge.
  - NiMH - For a NiMH pack, we recommend setting this item to "Disabled."
  - Cutoff Voltage - The ESC will set the cutoff for the pack based on the voltage the battery is at when the battery is connected.
- 3. RPM / Throttle Matching:** The motor RPM will change when the vehicle encounters obstacles or terrain changes (RPM is based on the loads on the vehicle). This setting manages how aggressively the ESC will change the RPM under load.  
When the throttle input remains unchanged, setting this item to "Low" provides the feeling of a brushed motor. Setting it to "High" provides a strong sense of speed-governing, making the vehicle maintain speed at a given throttle setting regardless of the resistance.  
The default setting is medium. This feature is only available in "Forward and Reverse (rock crawler)" mode.
- 4. Max. Forward Force:** The power applied to the motor when the throttle trigger is at the full throttle position. You can reduce the value for better driving feel/control when you drive a crawler over difficult terrain.
- 5. Max. Reverse Force:** The power applied to the motor when the throttle trigger is at the full reverse position. We recommend using a low value for most drivers.
- 6. Turbo Timing:** This item is adjustable from 0 degree to 10 degrees, the value you select will initiate at full throttle. It's usually activated on long straightaways and makes the motor unleash its maximum potential. Turbo timing adds a margin of power at full throttle.
- 7. Turbo Delay:** When "Turbo Delay" is set to "Instant", the Turbo Timing will be activated immediately when the throttle trigger is moved to the full throttle position. Turbo Delay values will delay the application of the selected Turbo Timing value.
- 8. Drag Brake Force:** Braking power when the throttle is at the neutral position. Higher drag brake values are used to provide a stronger hold or hill brakes.  
**IMPORTANT:** Drag brakes will consume more power and heat will be increased, start with small values and use with caution. Improve ventilation to ESC if heat is excessive.
- 9. Drag Brake Rate:** This feature manages how rapidly the ESC applies drag brakes. Choose the drag brake rate from level 1 (very soft) to level 9 (very aggressive); lower values ramp the brakes slower and prevent sudden stops or jerky stopping movements. In Auto mode, the ESC adjusts the Drag Brake Rate automatically based on the current speed and can be helpful to prevent the vehicle from flipping over or from sustaining drivetrain damage from harsh braking, but also provides a sensitive braking feel at low speeds:
  - The higher the current speed, the lower the drag brake rate.
  - The lower the current speed, the higher the drag brake rate.
- 10. Neutral Range:** Adjust this parameter to your preference to account for deadband in the throttle response. If you notice inconsistent drag brakes, increase your Neutral Range value.
- 11. Start Mode/(Punch):** Set the punch from level 1 (very soft) to level 9 (very aggressive). This feature is very useful for preventing tires from spinning. Punch levels 7 and above require high discharge capable batteries. If the car stutters or suddenly loses power when accelerating it may indicate the battery does not have adequate discharge capabilities for the application. Reduce the punch value, pinion gear size, or change to a higher C rated battery.
- 12. BEC Voltage:** Option 1: 6.0V Appropriate for most standard servos. Not recommended for High Voltage (HV) servos.
  - Option 2: 7.4V Appropriate for high voltage servos. Do not use this option with standard servos; it's possible a standard 5 – 6 Volt rated servo will be damaged at this voltage setting.
- 13. Motor Rotation:** Change this setting to reverse the motor rotation. Do not change wiring order with this motor/ESC combo.

## GEAR RATIOS

SPUR/PINION GEAR RATIO CHART

Pinion Size	11	12	13	14	15	16	17
Low Speed	81.47	74.68	68.94	64.01	59.75	56.01	52.72
High Speed	44.85	41.11	37.95	35.24	32.89	30.83	29.02

Standard Pinion

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The system will not connect	Your transmitter and receiver are too close together	Move transmitter 8 to 12 feet away from receiver
	You are near metal objects	Move to an area with less metal
	The receiver is bound to a different model memory	Make sure the correct model memory is active in your transmitter
	Your transmitter was placed into bind mode and is no longer bound to your receiver	Rebind your transmitter and receiver, and then re-calibrate
The receiver goes into failsafe a short distance away from the transmitter	Check for damage on the receiver antenna	Make sure your receiver antenna is protected and located as high as practical
		Replace the receiver or contact Horizon Product Support
The receiver stops responding during operation	Low receiver battery voltage. If the battery voltage is low, it may drop below 3.5V momentarily, causing the receiver to brown-out, then reconnect	Charge the receiver or vehicle battery. Spektrum receivers require at least 3.5V to operate
	Loose or damaged wires or connectors between battery and receiver	Check the wires and connection between the battery and receiver. Repair or replace wires and/or connectors
Vehicle does not move	Batteries are not installed properly in the transmitter	Ensure the transmitter batteries are properly installed
	Weak or no battery in the vehicle	Install a freshly charged vehicle battery
	Damaged motor	Replace the motor
	Frayed or broken wiring	Replace any damaged wiring
	ESC is shut down by heat protection circuit	Allow the ESC to cool down completely

PROBLEM	POSSIBLE CAUSE	SOLUTION
Loss of vehicle control	Improper antenna placement	Ensure the transmitter antenna is not blocked and the receiver antenna is located properly
	Weak or no batteries in the transmitter or vehicle	Install a freshly charged vehicle battery and new transmitter batteries
	Neutral or trim position is incorrect	Adjust the steering trim
	Receiver and/or battery not connected properly	Check all receiver and battery connections
Steering and/or throttle function is reversed	Servo travel is reversed at the transmitter	Set the transmitter servo reversing switch to the correct position
	Motor wires are not connected properly	Check all motor wires for correct polarity and secure connection
ESC ON - No motor function, audible tone or LED	Battery/connection issue	Recharge/replace battery. Secure all connections
	Damaged ESC/switch	Repair/replace ESC switch/ESC
	Damaged motor	Repair/replace
Motor- Stops and LED blinks	Low voltage protection	When the ESC LED blinks, recharge/replace battery
	Overheat protection	When the LED blinks, let motor/ESC cool, change set up or gearing to avoid overheating
Motor- Accelerates irregularly	Battery issue	Repair damaged wiring/replace battery
	Incorrect gearing	Adjust/replace gearing
	Worn or damaged motor	Repair/replace motor
Motor- Does not turn continuously in response to throttle	ESC/motor damaged	Repair/replace wiring or motor/ESC
Motor- Slows but will not stop	Incorrect transmitter/ESC calibration	Adjust throttle travel/other throttle settings on the transmitter/ESC. Repeat the ESC Calibration Procedure
Steering servo- Operates; motor does not run	Damaged motor	Test the motor apart from the vehicle system, repair/replace motor as needed
	Incorrect transmitter/ESC calibration	Adjust throttle travel/other throttle settings on the transmitter/ESC. Repeat the ESC Calibration Procedure
Steering/motor- not functioning	Low battery voltage	Recharge/replace
	Wrong model memory selected on transmitter	Select correct model settings on your transmitter, refer to transmitter and/or receiver manual
	Receiver not bound to transmitter	Bind transmitter to receiver, refer to transmitter and/or receiver manual
Vehicle- Does not operate at full speed	Battery issue	Recharge/replace
	Incorrect transmitter/ESC calibration	Adjust throttle travel/other throttle settings on the transmitter/ESC. Repeat the ESC Calibration Procedure

## LIMITED WARRANTY

### What this Warranty Covers

Horizon Hobby, LLC, (Horizon) warrants to the original purchaser that the product purchased (the "Product") will be free from defects in materials and workmanship for a period of 2 years from the date of purchase.

### What is Not Covered

This warranty is not transferable and does not cover (i) cosmetic damage, (ii) damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or due to improper use, installation, operation or maintenance, (iii) modification of or to any part of the Product, (iv) attempted service by anyone other than a Horizon Hobby authorized service center, (v) Product not purchased from an authorized Horizon dealer, or (vi) Product not compliant with applicable technical regulations or (vii) use that violates any applicable laws, rules, or regulations.

OTHER THAN THE EXPRESS WARRANTY ABOVE, HORIZON MAKES NO OTHER WARRANTY OR REPRESENTATION, AND HEREBY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE PURCHASER ACKNOWLEDGES THAT THEY ALONE HAVE DETERMINED THAT THE PRODUCT WILL SUITABLY MEET THE REQUIREMENTS OF THE PURCHASER'S INTENDED USE.

### Purchaser's Remedy

Horizon's sole obligation and purchaser's sole and exclusive remedy shall be that Horizon will, at its option, either (i) service, or (ii) replace, any Product determined by Horizon to be defective. Horizon reserves the right to inspect any and all Product(s) involved in a warranty claim. Service or replacement decisions are at the sole discretion of Horizon. Proof of purchase is required for all warranty claims. SERVICE OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY.

### Limitation of Liability

HORIZON SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY, REGARDLESS OF WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, TORT,

NEGLIGENCE, STRICT LIABILITY OR ANY OTHER THEORY OF LIABILITY, EVEN IF HORIZON HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Further, in no event shall the liability of Horizon exceed the individual price of the Product on which liability is asserted. As Horizon has no control over use, setup, final assembly, modification or misuse, no liability shall be assumed nor accepted for any resulting damage or injury. By the act of use, setup or assembly, the user accepts all resulting liability. If you as the purchaser or user are not prepared to accept the liability associated with the use of the Product, purchaser is advised to return the Product immediately in new and unused condition to the place of purchase.

### Law

These terms are governed by Illinois law (without regard to conflict of law principals). This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Horizon reserves the right to change or modify this warranty at any time without notice.

### WARRANTY SERVICES

#### Questions, Assistance, and Services

Your local hobby store and/or place of purchase cannot provide warranty support or service. Once assembly, setup or use of the Product has been started, you must contact your local distributor or Horizon directly. This will enable Horizon to better answer your questions and service you in the event that you may need any assistance. For questions or assistance, please visit our website at [www.horizonhobby.com](http://www.horizonhobby.com), submit a Product Support Inquiry, or call the toll free telephone number referenced in the Warranty and Service Contact Information section to speak with a Product Support representative.

#### Inspection or Services

If this Product needs to be inspected or serviced and is compliant in the country you live and use the Product in, please use the Horizon Online Service Request submission process found on our website or call Horizon to obtain a Return Merchandise Authorization (RMA) number. Pack the Product securely using a shipping carton. Please note that original boxes may be included, but are not designed to withstand the rigors of shipping without additional protection. Ship

via a carrier that provides tracking and insurance for lost or damaged parcels, as Horizon is not responsible for merchandise until it arrives and is accepted at our facility. An Online Service Request is available at [http://www.horizonhobby.com/content/service-center\\_render-service-center](http://www.horizonhobby.com/content/service-center_render-service-center). If you do not have internet access, please contact Horizon Product Support to obtain a RMA number along with instructions for submitting your product for service. When calling Horizon, you will be asked to provide your complete name, street address, email address and phone number where you can be reached during business hours. When sending product into Horizon, please include your RMA number, a list of the included items, and a brief summary of the problem. A copy of your original sales receipt must be included for warranty consideration. Be sure your name, address, and RMA number are clearly written on the outside of the shipping carton.

**NOTICE:** Do not ship Li-Po batteries to Horizon. If you have any issue with a Li-Po battery, please contact the appropriate Horizon Product Support office.

**Warranty Requirements**

For Warranty consideration, you must include your original sales receipt verifying the proof-of-purchase date. Provided warranty conditions have been met, your Product will be serviced or replaced free of charge. Service or replacement decisions are at the sole discretion of Horizon.

**Non-Warranty Service**

Should your service not be covered by warranty, service will be completed and payment will be required without notification or estimate of the expense unless the expense exceeds 50% of the retail purchase cost. By submitting the item for service you are agreeing to payment of the service without notification. Service estimates are available upon request. You must include this request with your item submitted for service. Non-warranty service estimates will be billed a minimum of 1/2 hour of labor. In addition you will be billed for return freight. Horizon accepts money orders and cashier's checks, as well as Visa, MasterCard, American Express, and Discover cards. By submitting any item to Horizon for service, you are agreeing to Horizon's Terms and Conditions found on our website [http://www.horizonhobby.com/content/service-center\\_render-service-center](http://www.horizonhobby.com/content/service-center_render-service-center).

**ATTENTION:** Horizon service is limited to Product compliant in the country of use and ownership. If received, a non-compliant Product will not be serviced. Further, the sender will be responsible for arranging return shipment of the un-serviced Product, through a carrier of the sender's choice and at the sender's expense. Horizon will hold non-compliant Product for a period of 60 days from notification, after which it will be discarded.

10/15

**WARRANTY AND SERVICE CONTACT INFORMATION**

COUNTRY OF PURCHASE	HORIZON HOBBY	CONTACT INFORMATION	ADDRESS
United States of America	Horizon Service Center (Repairs and Repair Requests)	<a href="http://servicecenter.horizonhobby.com/RequestForm/">servicecenter.horizonhobby.com/RequestForm/</a>	2904 Research Rd Champaign, IL 61822
	Horizon Product Support (Product Technical Assistance)	<a href="mailto:productsupport@horizonhobby.com">productsupport@horizonhobby.com</a> 877-504-0233	
	Sales	<a href="mailto:websales@horizonhobby.com">websales@horizonhobby.com</a> 800-338-4639	
European Union	Horizon Technischer Service	<a href="mailto:service@horizonhobby.eu">service@horizonhobby.eu</a>	Hanskampring 9 D 22885 Barsbüttel, Germany
	Sales: Horizon Hobby GmbH	+49 (0) 4121 2655 100	

**FCC INFORMATION**

**BRWSRIRVINGV1**

Contains FCC ID: BRWKATY1T

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and/or antenna and your body (excluding fingers, hands, wrists, ankles and feet). This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

**SUPPLIER'S DECLARATION OF CONFORMITY**

**Axial SCX6 Trail Honcho (AXI05001)**

**FC** This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment

generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Horizon Hobby, LLC  
2904 Research Rd.,  
Champaign, IL 61822  
Email: [compliance@horizonhobby.com](mailto:compliance@horizonhobby.com)  
Web: [HorizonHobby.com](http://HorizonHobby.com)

**IC INFORMATION**

**CAN ICES-3 (B)/NMB-3(B)**

**6157A-SRIRVINGV1**

Contains IC: 6157A-KATY1T

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## COMPLIANCE INFORMATION FOR THE EUROPEAN UNION



### EU COMPLIANCE STATEMENT:

#### Axial SCX6 Trail Honcho (AXI05001)

Hereby, Horizon Hobby, LLC declares that the device is in compliance with the following: EU Radio Equipment Directive 2014/53/EU; RoHS 2 Directive 2011/65/EU; RoHS 3 Directive - Amending 2011/65/EU Annex II 2015/863.

The full text of the EU declaration of conformity is available at the following internet address: <https://www.horizonhobby.com/content/support-render-compliance>.

**NOTE:** This product contains batteries that are covered under the 2006/66/EC European Directive, which cannot be disposed of with normal household waste. Please follow local regulations.

#### Wireless Frequency Range and Wireless Output Power

##### Transmitter

2402.0 - 2478.0 MHz  
17.7 dBm

##### Receiver

2404-2476 MHz  
-1.33 dBm

#### EU Manufacturer of Record:

Horizon Hobby, LLC  
2904 Research Road  
Champaign, IL 61822 USA

#### EU Importer of Record:

Horizon Hobby, GmbH  
Hanskampring 9  
22885 Barsbüttel Germany

#### WEEE NOTICE:




This appliance is labeled in accordance with European Directive 2012/19/EU concerning waste of electrical and electronic equipment (WEEE). This label indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling.




E328

## EXPLODED VIEWS // EXPLOSIONSZEICHNUNGEN // VUES ÉCLATÉES // VISTE ESPLOSE


### FRONT AXLE VORDERACHSE ESSIEU AVANT ASSALE ANTERIORE

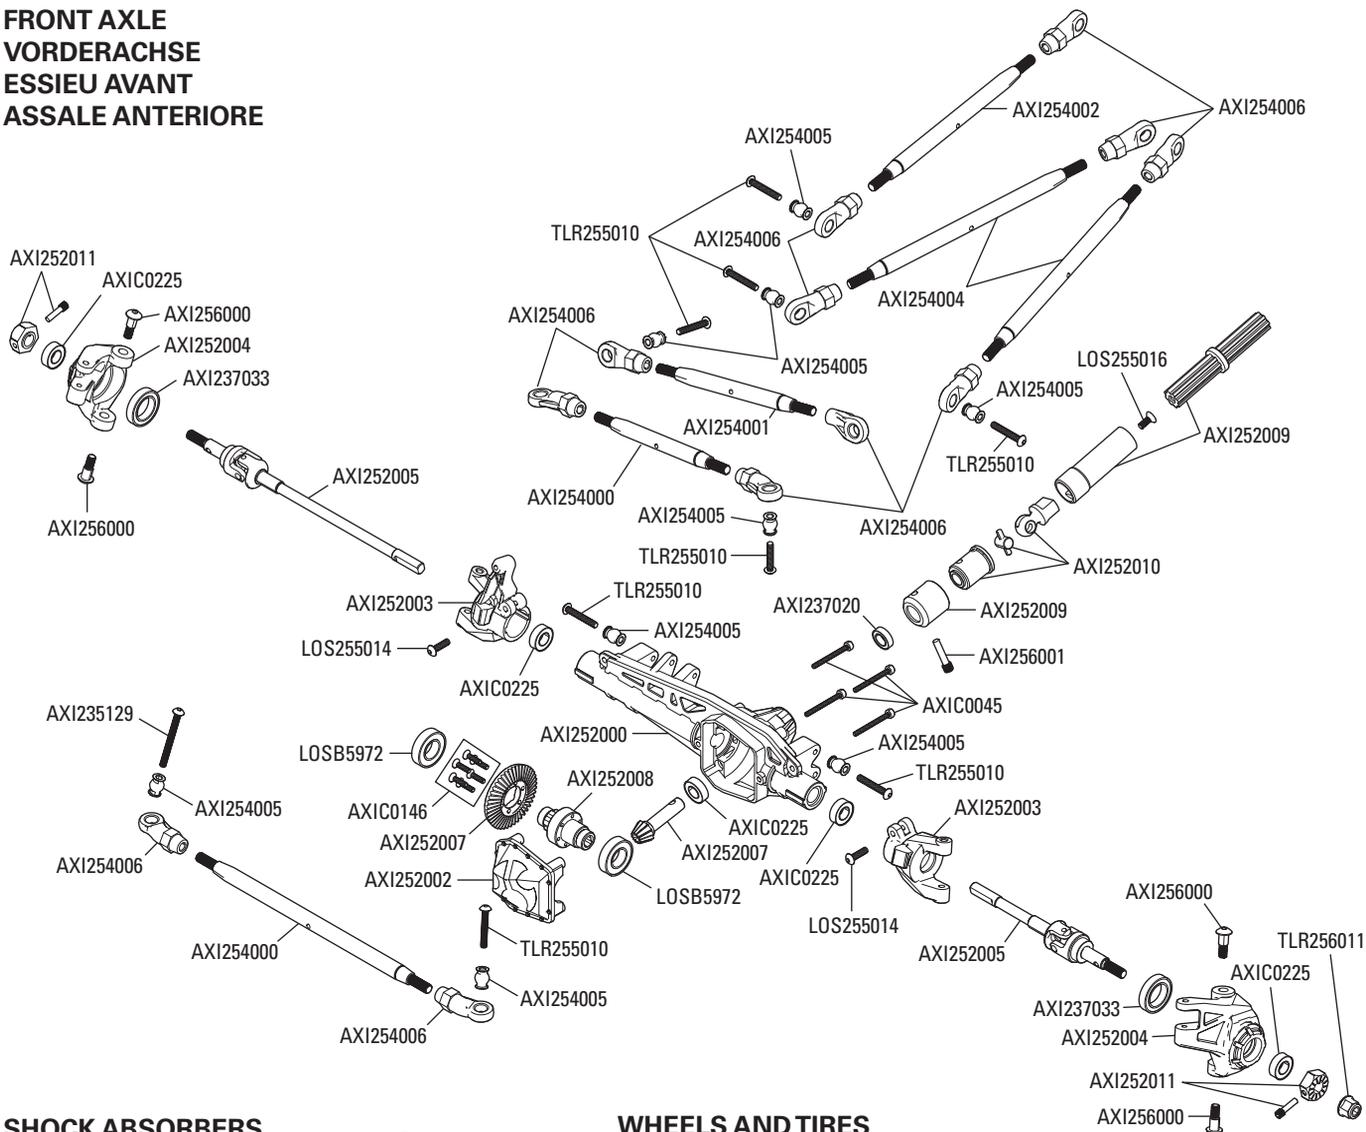

### SHOCK ABSORBERS STOSSDÄMPFER AMORTISSEURS AMMORTIZZATORI

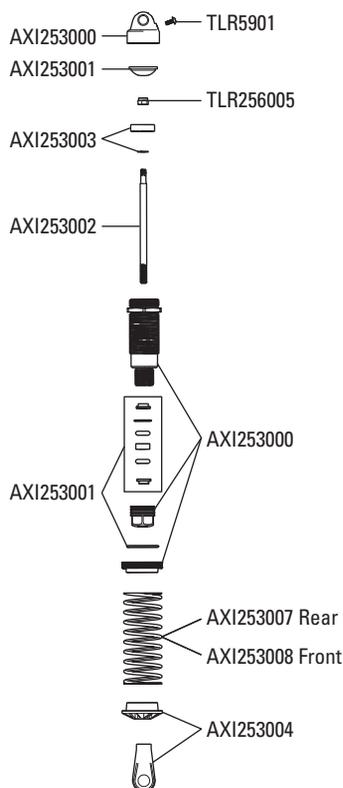


### WHEELS AND TIRES REIFEN UND RÄDER ROUES ET PNEUS RUOTE E PNEUMATICI

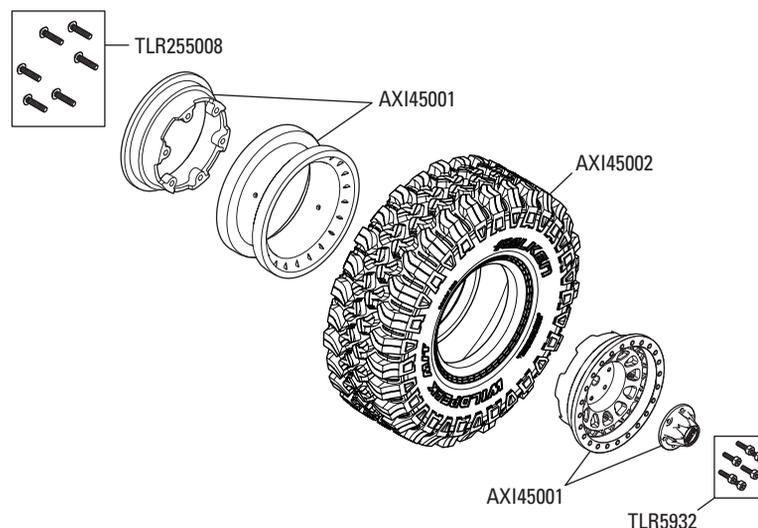

**EXPLODED VIEWS // EXPLOSIONSZEICHNUNGEN // VUES ÉCLATÉES // VISTE ESPLOSE**


**REAR AXLE  
HINTERACHSE  
ESSIEU ARRIÈRE  
ASSALE POSTERIORE**

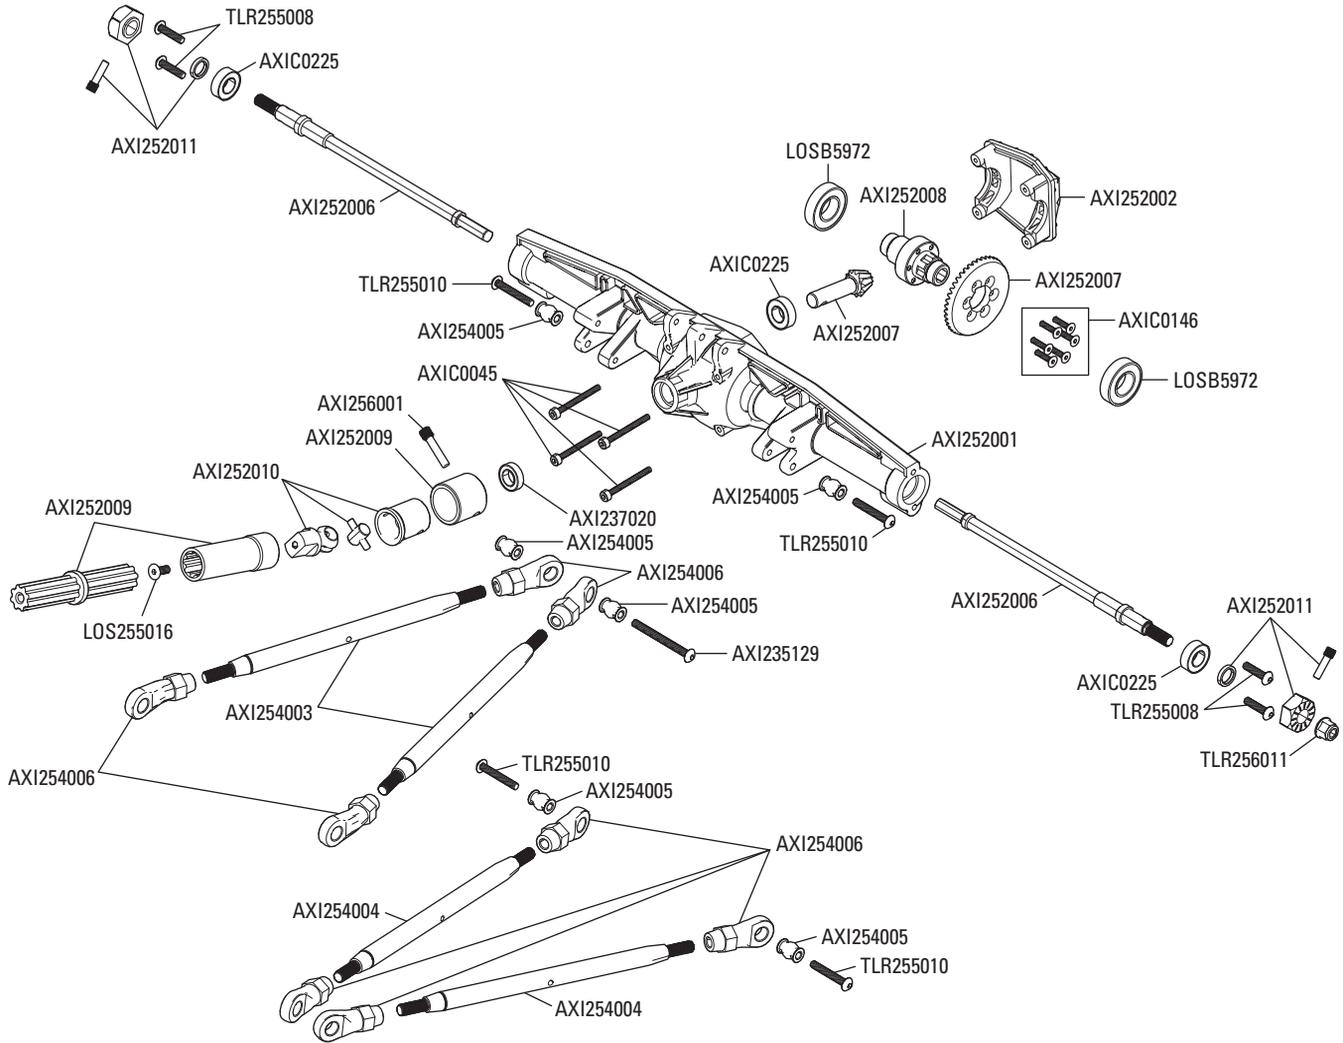



**EXPLODED VIEWS // EXPLOSIONSZEICHNUNGEN // VUES ÉCLATÉES // VISTE ESPLOSE**

**CHASSIS  
KAROSSERIE  
CHÂSSIS  
TELAIO**

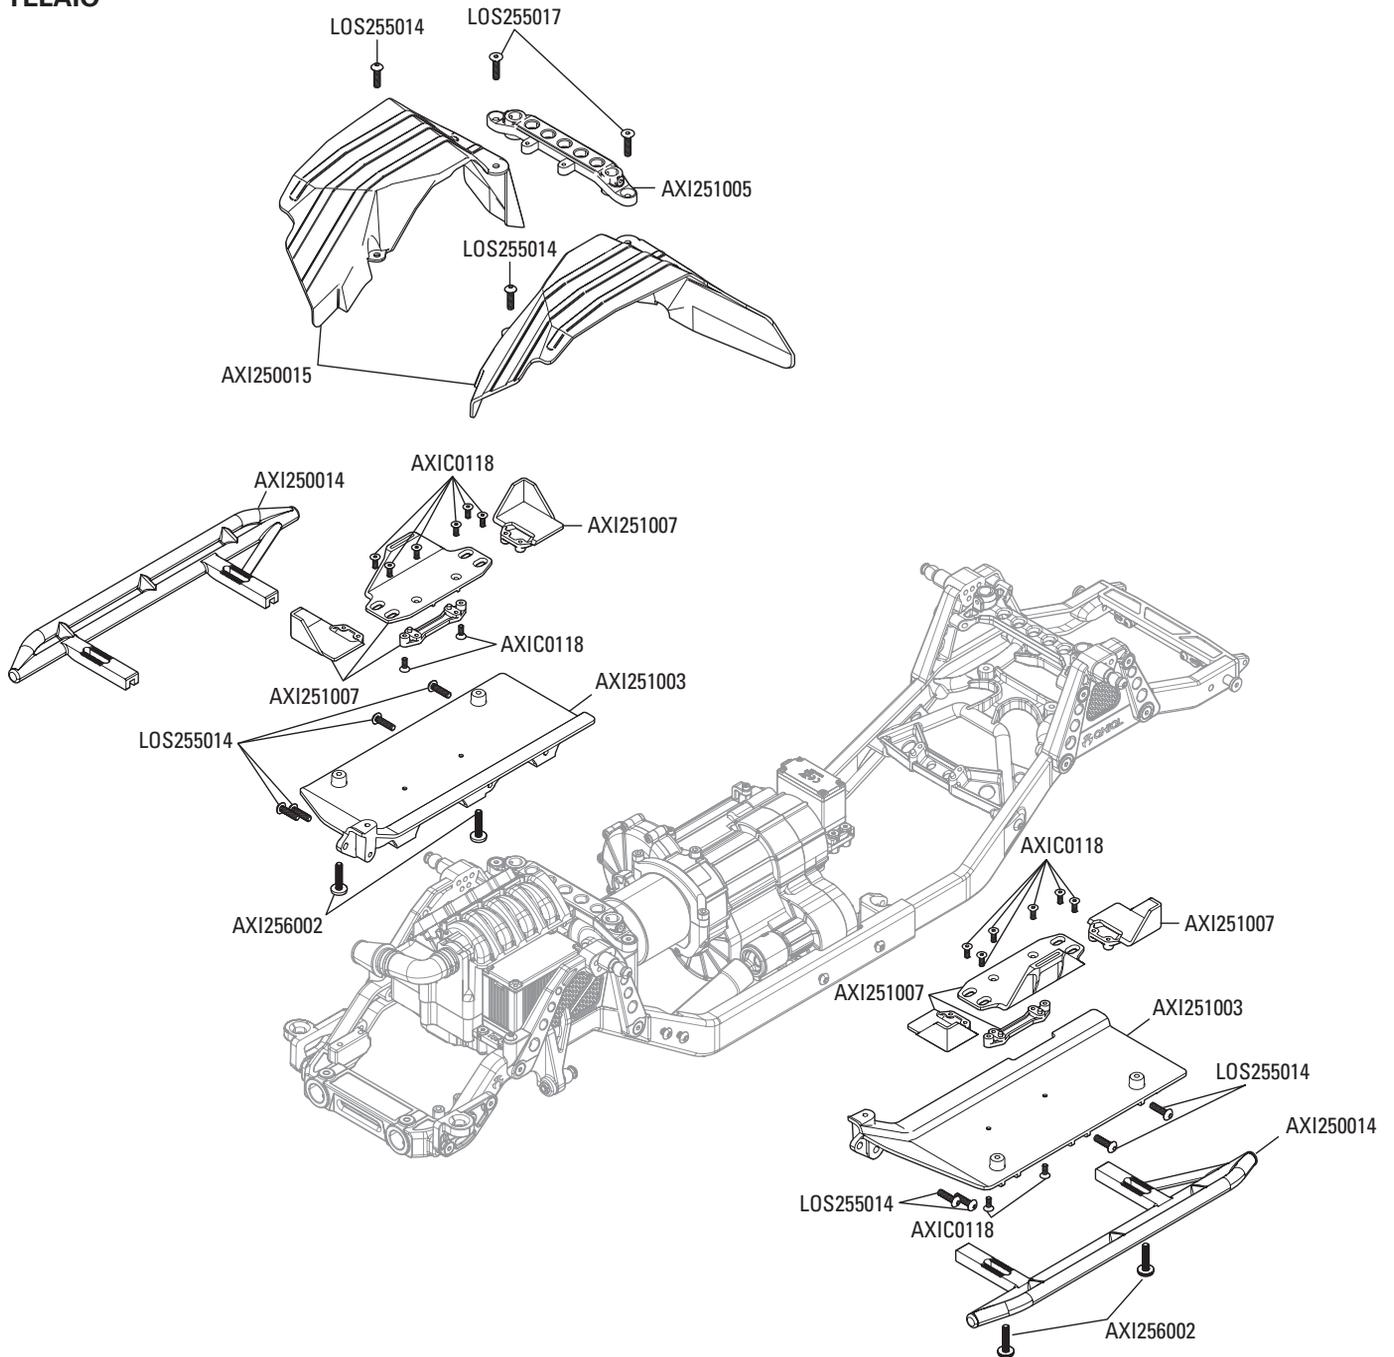



**PARTS LISTS // TEILELISTEN // LISTE DES PIÈCES // ELENCO COMPONENTI**

ARA723412	Cap Head Screw M4 x 12mm (4)	Inbusschraube M4 x 12 mm (4)	Vis d'assemblage creuse, M4 x 12 mm (4)	Viti testa cilindrica M4 x 12 mm (4)
ARAC9701	Cap Head Screws, 2,5 x 12 (10)	Inbusschrauben, 2,5 x 12 (10)	Vis d'assemblage creuses, 2,5 x 12 (10)	Viti testa cilindrica, 2,5 x 12 (10)
AXI15000	SCX6: White LED Light String	SCX6: Weiße LED-Lichtkette	SCX6 : série de lumières DEL blanches	SCX6: Cordino LED bianco
AXI235099	Button Head Screws, M2.5 x 10mm (10)	Rundkopfschrauben, M2,5 x 10 mm (10)	Vis à tête bombée, M2,5 x 10 mm (10)	Viti testa tonda, M2.5 x 10mm (10)
AXI235102	Button Head Screws, M2.5 x 18mm (10)	Rundkopfschrauben, M2,5 x 18 mm (10)	Vis à tête bombée, M2,5 x 18 mm (10)	Viti testa tonda, M2.5 x 18mm (10)
AXI235124	Button Head Screws, M4 x 16mm (10)	Rundkopfschrauben, M4 x 16 mm (10)	Vis à tête bombée, M4 x 16 mm (10)	Viti testa tonda, M4 x 16mm (10)
AXI234125	Button Head Screws, M4 x 18mm (10)	Rundkopfschrauben, M4 x 18 mm (10)	Vis à tête bombée, M4 x 18 mm (10)	Viti testa tonda, M4 x 18mm (10)
AXI235129	Button Head Screws, M4 x 40mm (8)	Rundkopfschrauben, M4 x 40 mm (8)	Vis à tête bombée, M4 x 40 mm (8)	Viti testa tonda, M4 x 40mm (8)
AXI235192	Flat Head Screws, M4 x 30mm (8)	Rundkopfschrauben, M4 x 30 mm (8)	Vis à tête plate, M4 x 30 mm (8)	Viti testa piatta, M4 x 30mm (8)
AXI235424	Cup Point Set Screws, M4 x 3mm (10)	Stellschraube mit Ringschneide, M24 x 3 mm (10)	Vis de pression à bout cuvette M4 x 3 mm (10)	Viti fermo no testa, M4 x 3mm (10)
AXI237033	15 x 24 x 5mm Ball Bearing (2)	15 x 24 x 5 mm Kugellager (2)	Roulement à billes 15 x 24 x 5 mm (2)	Cusc a sfera 15 x 24 x 5mm (2)
AXI250010	6mm Body Clip with Tabs (8)	6 mm Gehäuseklemme mit Laschen (8)	Clip de carrosserie de 6 mm avec languettes (8)	Clip carroz 6 mm con lingh (8)
AXI250011	SCX6: Body & Interior Set (Clear)	SCX6: Karosserie- & Innenraumsatz (farblos)	SCX6 : ensemble carrosserie et intérieur (transparent)	SCX6: Set interni e carroz (trasp)
AXI250012	SCX6: Rear Cage Set	SCX6: Käfigsatz Heck	SCX6 : ensemble cage arrière	SCX6: Set scocca posteriore
AXI250013	SCX6: Demello Front Bumper	SCX6: Demello-Frontstoßstange	SCX6 : pare-chocs avant Demello	SCX6: Paraurti anteriore Demello
AXI250014	SCX6: Rock Sliders	SCX6: Rock-Schieber	SCX6 : bas de caisse	SCX6: Gradini paratelaio
AXI250015	SCX6: Fender Liners Front	SCX6: Schutzblech vorne	SCX6 : revêtements de garde-boue avant	SCX6: Parafanghi anteriori
AXI250016	SCX6: LED Light Set	SCX6: LED-Licht-Satz	SCX6 : ensemble d'éclairage DEL	SCX6: Set luci LED
AXI251000	SCX6: Frame Rail Set	SCX6: Rahmenschienensatz	SCX6 : ensemble longeron de cadre de châssis	SCX6: Set longeroni telaio
AXI251003	SCX6: Chassis Side Plates, L/R	SCX6: Chassis-Seitenplatten, L/R	SCX6 : plaques latérales de châssis, gauche/droite	SCX6: Piastre laterali telaio sx/dx
AXI251004	SCX6: Center Trans Skid Plate	SCX6: Getriebe Gleitbrett Mitte	SCX6 : plaque de protection pour transmission centrale	SCX6: Piastra proteggi trasm centrale
AXI251005	SCX6: Front Servo Mount/Engine Cover/Seals	SCX6: Servohalterung/Motorabdeckung/Abdichtung Front	SCX6 : support de servo avant/capot du moteur/joints	SCX6: Cop mot/guarn/supp servo ant
AXI251006	SCX6: Upper Center Link Mounts	SCX6: Obere Gestänge-Halterungen Mitte	SCX6 : supports du bras central supérieur	SCX6: Supporti braccetti superiori centrali
AXI251007	SCX6: Battery Trays & Straps Set	SCX6: Satz Akkufächer & Halterungen	SCX6 : ensemble sangles et supports de batterie	SCX6: Set porta batterie e fascette
AXI251008	SCX6: Front Bumper Mount/Body Mounts, FR/RR	SCX6: Stoßstangen-/Karosseriehalterung Front, FR/RR	SCX6 : supports de carrosserie/support de pare-chocs avant, avant/arrière	SCX6: Supp paraurti ant/supp carroz ANT/PST
AXI251009	SCX6: Rear Chassis & Shock Tower Brace	SCX6: Chassis & Stoßdämpferbrücke Heck	SCX6 : châssis arrière et support de tour d'amortisseur	SCX6: Bret torre amm & telaio post
AXI251010	SCX6: Steering Servo Arm (15T)	SCX6: Servolenkarm (15T)	SCX6 : bras du servo de direction (15 dents)	SCX6: Braccio servo sterzo (15T)
AXI252000	SCX6: AR90 Front Axle Housing	SCX6: AR90 Achsgehäuse Front	SCX6 : carter d'essieu avant AR90	SCX6: AR90 carcassa assale ant
AXI252001	SCX6: AR90 Rear Axle Housing	SCX6: AR90 Achsgehäuse Heck	SCX6 : carter d'essieu arrière AR90	SCX6: AR90 carcassa assale post
AXI252002	SCX6: AR90 Diff Cover Axle Housing Red (2)	SCX6: AR90 Diff. Abdeckung Achsgehäuse Rot (2)	SCX6 : carter d'essieu cache de différentiel AR90 rouge (2)	SCX6: AR90 Allog assale coperc diff rosso (2)

AXI252003	SCX6: AR90 Steering Knuckle Carriers L/R	SCX6: AR90 Lenkrollenträger L/R	SCX6 : supports de rotule de direction AR90 gauche/droite	SCX6: AR90 Porta fuso a snodo sx/dx
AXI252004	SCX6: AR90 Steering Knuckles L/R	SCX6: AR90 Lenkrollen L/R	SCX6 : rotules de direction AR90 gauche/droite	SCX6: AR90 Fusi a snodo sx/dx
AXI252005	SCX6: AR90 Universal Driveshaft Set (FR)	SCX6: AR90 Universaler Antriebswellensatz (FR)	SCX6 : ensemble arbre de transmission universel AR90 (avant)	SCX6: AR90 Set alb trasm uni (ant)
AXI252006	SCX6:AR90 Axle Shaft Set Rear (2)	SCX6:AR90 Achswellensatz Heck (2)	SCX6 : ensemble arbre d'essieu AR90 arrière (2)	SCX6:AR90 Set alb assale post (2)
AXI252007	SCX6: Ring & Pinion Gear Set 43/12 (1ea)	SCX6: Ring- & Zahnradgetriebebesatz 43/12 (je 1)	SCX6 : ensemble anneau et pignon 43/12 (1 chacun)	SCX6: Kit pignone e corona 43/12 (1ea)
AXI252008	SCX6: AR90 Differential Locker	SCX6: AR90 Differenzial-Sicherung	SCX6 : blocage du différentiel AR90	SCX6: AR90 blocco diff
AXI252009	SCX6: Driveshaft Set (Composite)	SCX6: Antriebswellensatz (Verbundmaterial)	SCX6 : ensemble arbre de transmission (composite)	SCX6: Set alb trasm (composito)
AXI252010	SCX6: Driveshaft Coupler Set	SCX6: Antriebswellenkupplungssatz	SCX6 : ensemble coupleur d'arbre de transmission	SCX6: Set accpp alb trasmissione
AXI252011	SCX6: 17mm Hex Set w/Pins (4)	SCX6: 17 mm Sechskant-Set mit Stiften (4)	SCX6 : ensemble hexagonal 17 mm avec broches (4)	SCX6: Set hex 17 mm con perni (4)
AXI252012	SCX6: Motor Plate & Clamp	SCX6: Motorplatte, Klemme	SCX6 : plaque moteur et dispositif de serrage	SCX6: Piastra motore e morsetto
AXI252013	SCX6: 2-Speed Transmission Case/Brace Set	SCX6: 2-Geschwindigkeitsübertragung Gehäuse/Brückensatz	SCX6 : ensemble support/boîtier de transmission à deux rapports	SCX6: Set supp/scatola cambio 2 vel
AXI252014	SCX6: 50T Metal Spur Gear	SCX6: 50T Metall-Stirnrad	SCX6 : roue droite cylindrique en métal 50 dents	SCX6: Corona metallo 50T
AXI252015	SCX6: Mid Shaft Gear Set	SCX6: Mittelwelle Getriebebesatz	SCX6 : ensemble engrenage d'arbre médian	SCX6: Set ingr. albero centrale
AXI252016	SCX6: Idler & Output Gear/Shaft Set	SCX6: Leerlauf & Ausgangsgetriebe/Wellensatz	SCX6 : ensemble arbre/engrenage de sortie et pignon intermédiaire	SCX6: Set albero/ingr uscita e ruota folle
AXI252017	SCX6: Lower Shaft Gear Set & 2-Speed Slider	SCX6: Getriebebesatz für die untere Welle & 2-Geschwindigkeitsschieber	SCX6 : ensemble engrenage d'arbre inférieur et coulisseau à deux rapports	SCX6: Set ingr albero inf e cursore 2 vel
AXI252018	SCX6: Slipper Plate Set (2)	SCX6: Gleiterplattensatz (2)	SCX6 : ensemble plaque de glissière (2)	SCX6: Set piastra scorrimento (2)
AXI252019	SCX6: Slipper Pads (2)	SCX6: Gleitkissen (2)	SCX6 : tampons de glissière (2)	SCX6: Pattini scorrimento (2)
AXI252020	SCX6 Slipper Shaft Set & Spacer	SCX6: Gleitwellensatz & Abstandhalter	SCX6 Ensemble arbre de glissière et entretoise	SCX6 Set alb scorrim e distanz
AXI252021	SCX6: Front Output Shaft & Spacer	SCX6: Ausgangswelle & Abstandhalter Front	SCX6 : arbre de sortie avant et entretoise	SCX6: Alb uscita ant e distanziale
AXI252022	SCX6: Rear Output Shaft & Spacer	SCX6: Ausgangswelle & Abstandhalter Heck	SCX6 : arbre de sortie arrière et entretoise	SCX6: Alb uscita post e distanziale
AXI252023	SCX6: Inner Top Shaft & Spacer	SCX6: Obere Welle & Abstandhalter Innen	SCX6 : arbre supérieur intérieur et entretoise	SCX6: Alb sup interno e distanziale
AXI252024	SCX6: Shift Fork & Shaft Set	SCX6: Schaltgabel & Wellensatz	SCX6 : ensemble fourchette de débrayage et arbre	SCX6: Set albero e forcella cambio
AXI252025	SCX6: 2-Speed Servo Saver Set	SCX6: 2-Geschwindigkeits-Servo-Saver-Satz	SCX6 : ensemble économiseur de servo à deux rapports	SCX6: Set salva servo 2 velocità
AXI253000	SCX6: Threaded Shock Body, Cap & Collar Set (2)	SCX6: Satz Stoßdämpfergehäuse mit Gewinde, Abdeckung & Hülse (2)	SCX6 : corps d'amortisseur fileté, ensemble capuchon et bague (2)	SCX6: Set collare, tappo e corpo amm filettato (2)
AXI253001	SCX6: Shock Rebuild Kit	SCX6: Stoßdämpfer-Umbau-Kit	SCX6 : kit de reconstruction d'amortisseur	SCX6: Kit ricostruzione amm
AXI253002	SCX6: Shock Shaft (2)	SCX6: Kolbenstange (2)	SCX6 : axe d'amortisseur (2)	SCX6: Asta ammortizzatore (2)
AXI253003	SCX6: Shock Piston & Shim Set (4)	SCX6: Satz Hülsensatz & Dichtscheiben (4)	SCX6 : ensemble piston et cale d'amortisseur (4)	SCX6: Set pistoni e spessori amm (4)
AXI253004	SCX6: Shock End & Spring Cup (4)	SCX6: Stoßdämpferenden und Federteller (4)	SCX6 : embout et coupelle de ressort d'amortisseur (4)	SCX6: Terminali e coppe amm (4)
AXI253005	SCX6: Shock Spring 2.3 Rate Purple 100mm (2)	SCX6: Stoßdämpferfeder Rate 2,3 Lila 100 mm (2)	SCX6 : ressort d'amortisseur raideur 2,3 violet 100 mm (2)	SCX6: Molle amm 2.3 Rate viola 100 mm (2)

AXI253006	SCX6: Shock Spring 3.0 Rate Orange 100mm (2)	SCX6: Stoßdämpferfeder Rate 3,0 Lila 100 mm (2)	SCX6 : ressort d'amortisseur raideur 3,0 orange 100 mm (2)	SCX6: Molle amm 3.0 Rate arncion 100 mm (2)
AXI254000	SCX6: S.S. Steering Link Set (200.8mm & 119.5mm)	SCX6: Edelstahl- Lenkgliedsatz (200,8 mm & 119,5 mm)	SCX6 : ensemble timonerie de direction en acier inox. (200,8 mm et 119,5 mm)	SCX6: Set tiranti sterzo, inox (200,8 & 119,5 mm)
AXI254001	SCX6: SS Panhard Link (124.9mm)	SCX6: Edelstahl-Panhard-Stange (124,9 mm)	SCX6 : bras Panhard en acier inox. (124,9 mm)	SCX6: SS tirnt Panhard (124,9 mm)
AXI254002	SCX6 Stainless Steel Turnbuckle, M6 x 157.3mm (1)	SCX6: Edelstahlspanschraube, M6 x 157,3 mm (1)	SCX6 Tendeur en acier inoxydable, M6 x 157,3 mm (1)	SCX6 tenditore inox, M6 x 157,3 mm (1)
AXI254003	SCX6:SS Turnbuckle M6 x 163.5mm (2)	SCX6:Edelstahlspanschraube, M6 x 163,5 mm (2)	SCX6 : tendeur en acier inox. M6 x 163,5 mm (2)	SCX6 tenditore inox, M6 x 163,5 mm (2)
AXI254004	SCX6: SS Turnbuckle M6 x 176mm (2)	SCX6: Edelstahlspanschraube, M6 x 176 mm (2)	SCX6 : tendeur en acier inox. M6 x 176 mm (2)	SCX6: tenditore inox M6 x 176 mm (2)
AXI254005	SCX6: 9 x 12 x 4mm Steel Pivot Ball (12)	SCX6: 9 x 12 x 4 mm Stahlkugelzapfen (12)	SCX6 : rotule en acier 9 x 12 x 4 mm (12)	SCX6: pivot ball acciaio 9 x 12 x 4 mm (12)
AXI254006	SCX6: Rod End Set (20)	SCX6: Stangenkopfsatz (20)	SCX6 : ensemble embout de bielle (20)	SCX6: Kit teste a snodo (20)
AXI254007	SCX6: Shock Mount Pivot Balls, Steel (4)	SCX6: Stoßhalterung Kugelzapfen, Stahl (4)	SCX6 : rotules de support d'amortisseur en acier (4)	SCX6: pivot ball supp amm, acciaio (4)
AXI256000	SCX6: King Pin Screws (4)	SCX6: Sattelzapfenschrauben (4)	SCX6 : vis pivot (4)	SCX6: Viti kingpin (4)
AXI256001	M6 x 4 x 22mm, Screw Shaft (8)	M6 x 4 x 22 mm, Schraubenschaft (8)	Tige de vis M6 x 4 x 22 mm (8)	Alb filett M6 x 4 x 22 mm (8)
AXI256002	M4x18mm Oversize Socket Screw (8)	M4 x 18 mm Übergroße Zylinderschraube (8)	Vis creuse surdimensionnée M4 x 18 mm (8)	Viti esalobate sovramisura M4 x 18 (8)
AXI256003	C-Clip 8mm Shaft (8)	C-Clips, 8 mm Welle (8)	Clip en C, tige de 8 mm (8)	C-clip, albero 8 mm (8)
AXI45001	2.9" Black Rhino Primm Beadlock Wheels (2)	2,9" Black Rhino Primm Beadlock-Räder (2)	Roues à verrou de talon Black Rhino Primm 7,4 cm (2,9 po) (2)	Cerchi 2.9 Black Rhino Primm Beadlock (2)
AXI45002	2.9" Falken Wildpeak M/T w/Insert	2,9" Falken WILDPEAK M/T mit Einsatz	Falken Wildpeak M/T 7,4 cm (2,9 po) avec insert	2.9 Falken Wildpeak M/T con inserto
AXIC0012	Hex Socket Button Head Screws, M3 x 25mm Black (10)	Sechskant-Rundkopfschrauben, M3 x 25 mm, Schwarz (10)	Vis à tête bombée creuse hexagonale, M3 x 25 mm noires (10)	Viti tst tonda esagono incassato, M3 x 25 mm nero (10)
AXIC0045	Cap Head Screws, M3 x 30mm, Black (10)	Inbusschrauben, M3 x 30 mm, Schwarz (10)	Vis d'assemblage creuses, M3 x 30 mm, noires (10)	Viti tst cilindrica, M3 x 30 mm nero (10)
AXIC0085	Cap Head Screws, M3 x 10mm, Black Oxide (10)	Inbusschrauben, M3 x 10 mm, Schwarzoxid (10)	Vis d'assemblage creuses, M3 x 10 mm, oxyde noir (10)	Viti tst cilindrica, M3 x 10 mm nero ossido (10)
AXIC0115	Hex Socket Button Head Screws, M3 x 10mm, Black (10)	Sechskant-Rundkopfschrauben, M3 x 10 mm, Schwarz (10)	Vis à tête bombée creuse hexagonale, M3 x 10 mm, noires (10)	Viti tst tonda esagono incassato, M3 x 10mm nero (10)
AXIC0116	Hex Socket Button Head Screws, M3 x 12mm, Black (10)	Sechskant-Rundkopfschrauben, M3 x 12 mm, Schwarz (10)	Vis à tête bombée creuse hexagonale, M3 x 12 mm, noires (10)	Viti tst tonda esagono incassato, M3 x 12mm nero (10)
AXIC0118	Hex Flat Head Screws, M3 x 8mm, Black (10)	Sechskant-Flachkopfschrauben, M3 x 8 mm, Schwarz (10)	Vis à tête plate hexagonale, M3 x 8 mm, noires (10)	Viti tst piatta, M3 x 8mm nero (10)
AXIC0146	Hex Socket Flat Head Screws, M3 x 12mm, Black (10)	Sechskant-Flachkopfschrauben, M3 x 12 mm, Schwarz (10)	Vis à tête plate creuse hexagonale, M3 x 12 mm, noires (10)	Viti tst piatta esagono incassato, M3 x 12mm nero (10)
AXIC0149	Hex Socket Flat Head Screws, M3 x 20mm, Black (10)	Sechskant-Flachkopfschrauben, M3 x 20 mm, Schwarz (10)	Vis à tête plate creuse hexagonale, M3 x 20 mm, noires (10)	Viti tst piatta esagono incassato, M3 x 20mm nero (10)
AXIC0221	Bearing 5 x 11 x 4mm	Kugellager 5 x 11 x 4 mm	Roulement 5 x 11 x 4 mm	Cuscinetto a sfera 5 x 11 x 4 mm
AXIC0225	Bearing 8 x 16 x 5mm	Kugellager 8 x 16 x 5 mm	Roulement 8 x 16 x 5 mm	Cuscinetto a sfera 8 x 16 x 5 mm
AXIC1009	Hex Socket Oversize Head, 3 x 10mm (10)	Sechskant-Zylinderkopf in Übergröße, 3 x 10 mm (10)	Tête surdimensionnée creuse hexagonale, 3 x 10 mm (10)	Viti oversize esagono incassato, 3 x 10 mm (10)
AXIC1185	Hex Socket Flat Head Screws, M3 x 10mm (10)	Sechskant-Flachkopfschrauben, M3 x 10 mm (10)	Vis à tête plate creuse hexagonale, M3 x 10 mm (10)	Viti tst piatta esagono incassato, M3 x 10 mm (10)
AXIC3343	Set Screw, Black, M4 x 20mm (10)	Stellschraube, Schwarz, M3 x 20 mm (10)	Vis de pression, noire, M4 x 20 mm (10)	Viti di fermo, nere, M4 x 20 mm (10)
LOS255011	Button Head Screws, M4 x 30mm (10)	Rundkopfschrauben, M4 x 30 mm (10)	Vis à tête bombée, M4 x 30 mm (10)	Viti testa tonda, M4 x 30 mm (10)
LOS255012	Button Head Screws, M4 x 35mm (10)	Rundkopfschrauben, M4 x 35 mm (10)	Vis à tête bombée, M4 x 35 mm (10)	Viti testa tonda, M4 x 35 mm (10)

LOS255014	Button Head Screws, Steel, Black Oxide, M4 x 14mm (10)	Rundkopfschrauben, Stahl, Schwarzoxid, M4 x 14 mm (10)	Vis à tête bombée, acier, oxyde noir, M4 x 14 mm (10)	Viti testa tonda, acciaio, nero ossido, M4 x 14 mm (10)
LOS255016	Flat Head Screws, Steel, Black Oxide, M4 x 10mm (10)	Flachkopfschrauben, Stahl, Schwarzoxid, M4 x 10 mm (10)	Vis à tête plate, acier, oxyde noir, M4 x 10 mm (10)	Viti testa piatta, acciaio, nero ossido, M4 x 10 mm (10)
LOS255017	Flat Head Screws, Steel, Black Oxide, M4 x 16mm (10)	Flachkopfschrauben, Stahl, Schwarzoxid, M4 x 16 mm (10)	Vis à tête plate, acier, oxyde noir, M4 x 16 mm (10)	Viti testa piatta, acciaio, nero ossido, M4 x 16 mm (10)
LOS255019	Flat Head Screws, Steel, Black Oxide, M4 x 14mm (10)	Flachkopfschrauben, Stahl, Schwarzoxid, M4 x 14 mm (10)	Vis à tête plate, acier, oxyde noir, M4 x 14 mm (10)	Viti testa piatta, acciaio, nero ossido, M4 x 14 mm (10)
LOS255020	Flat Head Screws, Steel, Black Oxide, M4 x 18mm (10)	Flachkopfschrauben, Stahl, Schwarzoxid, M4 x 18 mm (10)	Vis à tête plate, acier, oxyde noir, M4 x 18 mm (10)	Viti testa piatta, acciaio, nero ossido, M4 x 18 mm (10)
LOSB5972	Outer Axle Bearings 12 x 24 x 6mm (2)	Außenachsenlager 12 x 24 x 6 mm (2)	Roulements d'essieu extérieurs 12 x 24 x 6 mm (2)	Cuscinetti assale esterni, 12 x 24 x 6 mm (2)
SPMR2340T	DX3 SMART Transmitter with Thumb Steer	DX3 SMART-Sender mit Daumensteuerung	Émetteur SMART DX3 avec direction au pouce	DX3 SMART trasmittente con sterzo a pollice
SPMS614	S614 Metal Gear Servo 23T WP	S614 Metallgetriebeservo 23T WP	Servo à engrenage métallique S614, 23 dents, étanche	S614 servo ingr metallo 23T WP
SPMS905	S905 Large Scale WP Servo 15T	S905 Großer WP Servo 15T	Servo étanche grande échelle S905 15 dents	S905 servo scala grande 15T WP
SPMXSE1080	120A Crawl Smart Sensored BL ESC	120 A Smart-Crawl mit Sensor BL ESC	ESC sans balais avec capteurs Smart Crawl 120 A	ESC BL 120 A Crawl Smart con sensori
SPMXSM3100	1200Kv 1/6 Brushless Sensored Crawler Motor	1200 Kv 1/6 bürstenloser Crawler-Motor mit Sensor	Moteur Crawler avec capteurs sans balais 1/6 1200 Kv	Motore 1200 Kv 1/6 Brushless Crawler con sensori
TLR245012	Button Head Screws, M2.5 x 4mm (10)	Rundkopfschrauben, M2,5 x 4 mm (10)	Vis à tête bombée, M2,5 x 4 mm (10)	Viti testa tonda, M2.5 x 4 mm (10)
TLR255008	Button Head Screws, M4 x 16mm (10)	Rundkopfschrauben, M4 x 16 mm (10)	Vis à tête bombée, M4 x 16 mm (10)	Viti testa tonda, M4 x 16 mm (10)
TLR255009	Button Head Screws M4 x 20mm (10)	Rundkopfschrauben M4 x 20 mm (10)	Vis à tête bombée, M4 x 20 mm (10)	Viti testa tonda, M4 x 20 mm (10)
TLR255010	Button Head Screws, M4 x 25mm (10)	Rundkopfschrauben, M4 x 25 mm (10)	Vis à tête bombée, M4 x 25 mm (10)	Viti testa tonda, M4 x 25 mm (10)
TLR255013	Flat Head Screws, M4 x 12mm (10)	Flachkopfschrauben, M4 x 12 mm (10)	Vis à tête plate, M4 x 12 mm (10)	Viti testa piatta, M4 x 12 mm (10)
TLR255014	Flat Head Screws, M4 x 20mm (10)	Flachkopfschrauben, M4 x 20 mm (10)	Vis à tête plate, M4 x 20 mm (10)	Viti testa piatta, M4 x 20 mm (10)
TLR256005	Nylock Nut, M4 (10)	Nylock-Mutter, M4 (10)	Rondelles, M4 (10)	Dado Nylock, M4 (10)
TLR256006	Washers, M4 (10)	Unterlegscheiben, M4 (10)	Écrou à frein élastique, M5 (10)	Rondelle, M4 (10)
TLR256009	Nylock Nut, M5 (10)	Nylock-Mutter, M5 (10)	Écrou à frein élastique, M5 (10)	Dado Nylock, M5 (10)
TLR256011	Nylock Nut, M6 (10)	Nylock-Mutter, M6 (10)	Écrou à frein élastique, M6 (10)	Dado Nylock, M6 (10)
TLR5901	Button Head Screws, M3 x 6mm (10)	Rundkopfschrauben, M3 x 6 mm (10)	Vis à tête bombée, M3 x 6 mm (10)	Viti testa tonda, M3 x 6 mm (10)
TLR5913	Button Head Screws, M2.5 x 12mm (10)	Rundkopfschrauben, M2,5 x 12 mm (10)	Vis à tête bombée, M2,5 x 12 mm (10)	Viti testa tonda, M2.5 x 12 mm (10)
TLR6105	E-Clips, 3mm Shaft (12)	E-Clips, 3 mm Welle (12)	Clips en e, axe de 3 mm (12)	E-Clip, albero 3 mm (12)
SPMX53S100	5000mAh 3S 11.1V Smart G2 100C: IC5	5000 mAh 3S 11,1 V Smart G2 100C: IC5	5000 mAh 3S 11,1 V Smart G2 100C: IC5	5000mAh 3S 11,1V Smart G2 100C: IC5
SPMX53S30	5000mAh 3S 11.1V Smart G2 30C: IC5	5000 mAh 3S 11,1 V Smart G2 30C: IC5	5000 mAh 3S 11,1 V Smart G2 30C: IC5	5000mAh 3S 11,1V Smart G2 30C: IC5
SPMXC2010	Smart S2200 G2 AC Charger, 2 x 200W	Smart S2200 G2 Wechselstrom-Ladegerät, 2 x 200 W	Chargeur CA Smart S2200 G2, 2 x 200 W	Caric Smart S2200 G2 AC, 2 x 200W
SPMXC2020	Smart S1200 G2 AC Charger, 1 x 200W	Smart S1200 G2 Wechselstrom-Ladegerät, 1 x 200 W	Chargeur CA Smart S1200 G2, 1 x 200 W	Caric Smart S1200 G2 AC, 1 x 200W
AXI350001	SCX6: Optional Body Post Set	SCX6: Optionaler Gehäusestangensatz	SCX6 : ensemble poteau de carrosserie facultatif	SCX6: Set supporti scocca opzionali
DYN1400	LiPo Charge Protection Bag, Small	LiPo Ladeschutztasche, klein	Sac de protection du chargeur de batterie Li-Po, petit	Borsa per caricabatterie LiPo, piccola
DYN1405	LiPo Charge Protection Bag, Large	LiPo Ladeschutztasche, groß	Sac de protection du chargeur de batterie Li-Po, grand	Borsa per caricabatterie LiPo, piccola grand
PRO1018614	1/6 Hyrax XL G8 Fr/Rr 2.9" Tire	1/6 Hyrax XL G8 Front/Heck 2,9" Reifen	Pneu 7,4 cm (2,9 po) avant/arrière G8 Hyrax XL 1/6	Ruote 1/6 Hyrax XL G8 Ant/Pst 2.9"

RCZAXI037B	Metal Shielded Bearing Kit	Abgeschirmter Lagersatz Metall	Kit de roulement blindé métallique	Kit cusc scudo metallo
RCZAXI037R	Rubber Shielded Bearing Kit	Abgeschirmter Lagersatz Gummi	Kit de roulement blindé en caoutchouc	Kit cusc scudo gomma
SPMR5025	DX5 Pro 2021 DSMR TX Only	DX5 Pro 2021 DSMR nur TX	Émetteur uniquement DSMR 2021 DX5 Pro	DX5 Pro 2021 DSMR TX solo
SPMR5115	DX5C SMART 5CH DSMR TX ONLY	DX5C SMART DSMR 5-Kanal nur TX	Émetteur UNIQUEMENT DSMR 5 canaux SMART DX5C	DX5C SMART 5CH DSMR TX solo
SPMR5200	DX5 Rugged Tx	DX5 Rugged TX	Émetteur robuste DX5	DX5 Rugged TX
SPMR5200G	DX5 Rugged DSMR TX Only, Green	Nur DX5 Rugged DSMR TX, Grün	Émetteur uniquement DX5 robuste DSMR, vert	DX5 Rugged DSMR TX solo, verde
SPMSS9110BL	S9110BL 1/5 Speed Metal Servo	S9110BL 1/5 Geschwindigkeit Metallservo	Servo métallique vitesse 1/5 S9110BL	S9110BL servo mtl vel 1/5
SPMSS9120BL	S9120BL 1/5 Torque Metal Servo	S9120BL 1/5 Drehmoment Metallservo	Servo métallique couple 1/5 S9120BL	S9120BL servo mtl coppia 1/5

## ELECTRONICS // ELECTRONIK // COMPOSANTS ÉLECTRONIQUES // ELETTRONICA

Part #	Description	Beschreibung	Description	Descrizione
SPMR2340T	Spektrum DX3 SMART DSMR Transmitter	DX3 SMART 3CH Sender	DX3 Smart 3CH Émetteur	DX3 Smart 3CH Trasmettitore
SPMS614	S614 Metal Gear Servo 23T, Waterproof	Metallgetriebeservo	Servo à engrenages métalliques	Servo, ingranaggio metallico
SPMS905	S905 Large Scale Waterproof Servo 15T	S905 Wasserdichter Oberflächenservo 15T	S905 Servo étanche, grande échelle 15T	S905 Servo su larga scala 15T, a prova d'acqua
SPMSR515	SR515 DSMR 5 CH Receiver	DSMR 5 Kanal Empfänger	Récepteur DSMR 5Ch	Ricevitore DSMR 5Ch
SPMXSE1080	120A Crawl Smart Sensored Brushless ESC	120A Crawl Smart Geschwindigkeitsregler	120A Crawler Smart Brushless Sensored ESC	120A Crawler Smart Brushless Sensored ESC
SPMXSM3100	1200Kv 1/6 Brushless Sensored Crawler Motor	1200Kv 1/6 Crawler Elektromotor	1200Kv 1/6 Moteur électrique	1200Kv 1/6 Motore elettrico Brushless Sensored Crawler



## EXPLORE

[facebook.com/axialinc](https://facebook.com/axialinc) | [instagram.com/axialracing](https://instagram.com/axialracing) | [twitter.com/axialrc](https://twitter.com/axialrc)  
[youtube.com/axialvideos](https://youtube.com/axialvideos) | [flickr.com/axialrc](https://flickr.com/axialrc)



©2021 Horizon Hobby, LLC.

Axial, the Axial logo, DSM, DX3, DSMR, IC5, EC5, SCX6, and the Horizon Hobby logo are trademarks or registered trademarks of Horizon Hobby, LLC.

The Spektrum trademark is used with permission of Bachmann Industries, Inc. BFGoodrich and the BFGoodrich logo are trademarks of Michelin Lifestyle Limited, used under license. The CRC name and logo are trademarks or registered trademarks of Casey Currie Motorsports and are used under license. Nitto is a registered trademark of Nitto Tire U.S.A., Inc. and is used under license. The KMC Wheels name and logo are property of WheelPros, LLC and are used under license.

All other trademarks, service marks and logos are property of their respective owners.

Completed 6/22

AXI05001T1/T2

134221