

ALASKAN HAULER



A1339-200

KENWORTH CONVENTIONAL

1/25 SCALE
SUPER-DETAILED!

IMPORTANT! READ THESE POINTS BEFORE YOU BEGIN

- 1 "TEST FIT" all parts before cementing. Trim excess plastic from parts before joining.
- 2 Cement all parts unless otherwise indicated by the instructions.
- 3 Use paint and cement made for styrene plastic only.
- 4 Paint all sub-assemblies before attaching chrome parts.
- 5 Follow all of the numbers on the instruction sheet beginning with number one.


SPECIAL NOTE: To easily identify part locations on the sprues, the numbers used on this instruction sheet match the numbers shown in the parts drawing on the bottom of the box.

PAINT COLORS



A Black	J Steel	O Yellow	Y Dark Green
B Flat Black	K Brass	R Tan	Z Off-White
C Semi-Gloss Black	L Gold	S Brown	CC Chassis Color
D White	M Amber	T Lt. Blue	IC Interior Color
E Flat White	N Transparent Amber	U Med. Blue	BC Body Color
F Silver	P Red	V Dark Blue	SC Semi-Gloss
G Chrome (Bright Silver)	Q Transparent Red	W Transparent Blue	▲ Gloss
H Aluminum	R Orange	X Lt. Green	▲ Metallic

It is recommended that you search the Internet for additional color references and details.


ENGINE 1 - 31

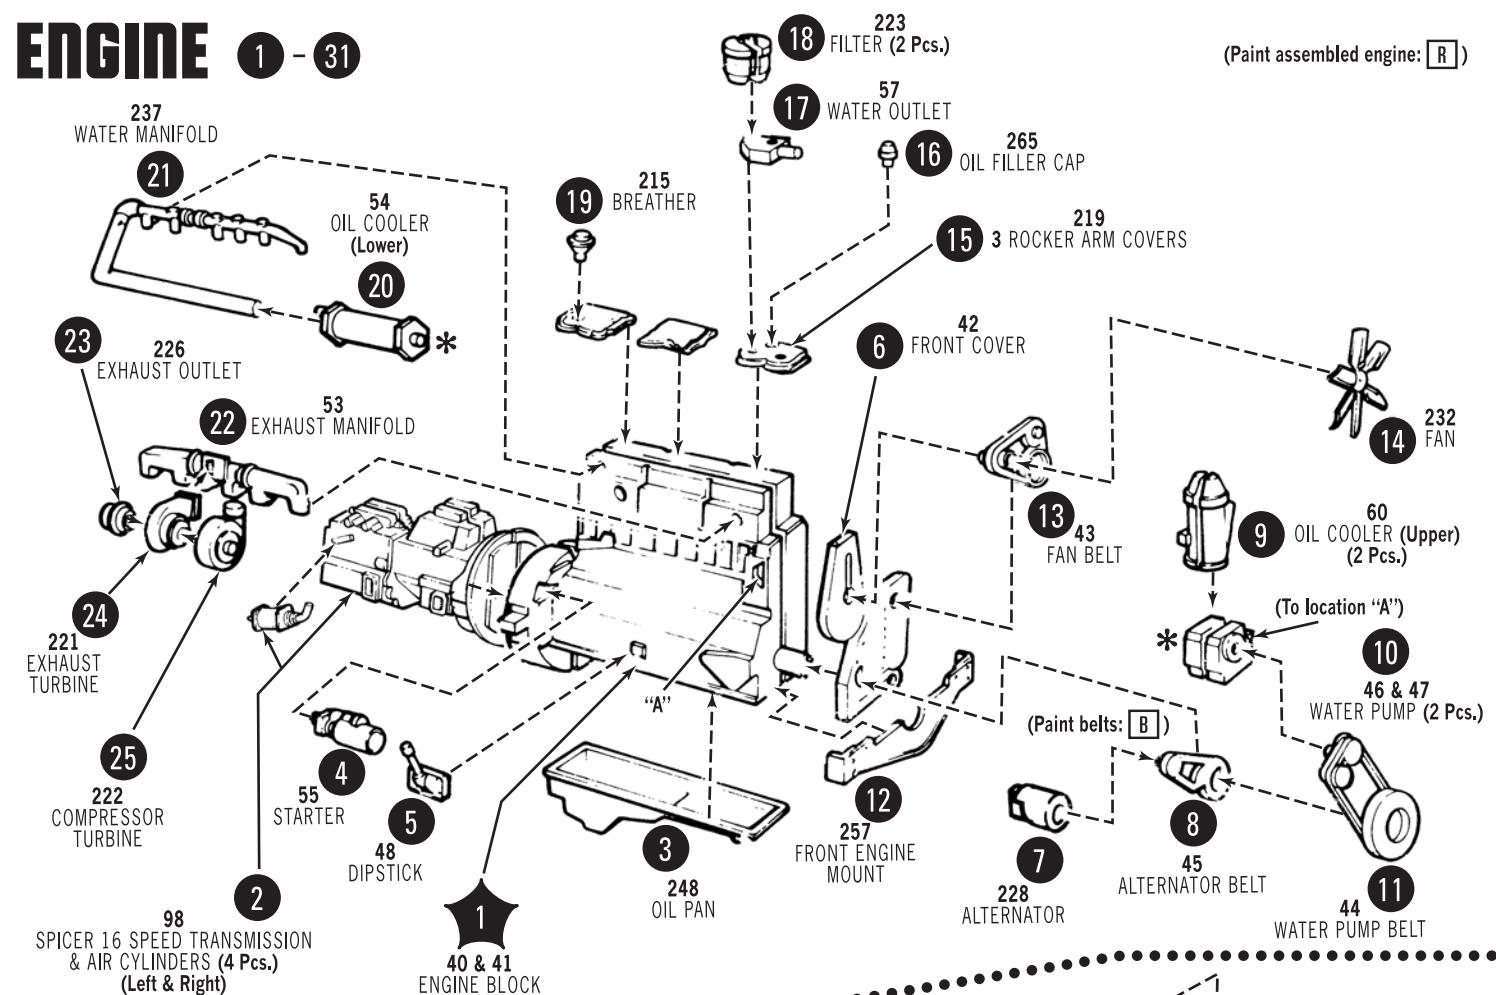


LENSES TO USE

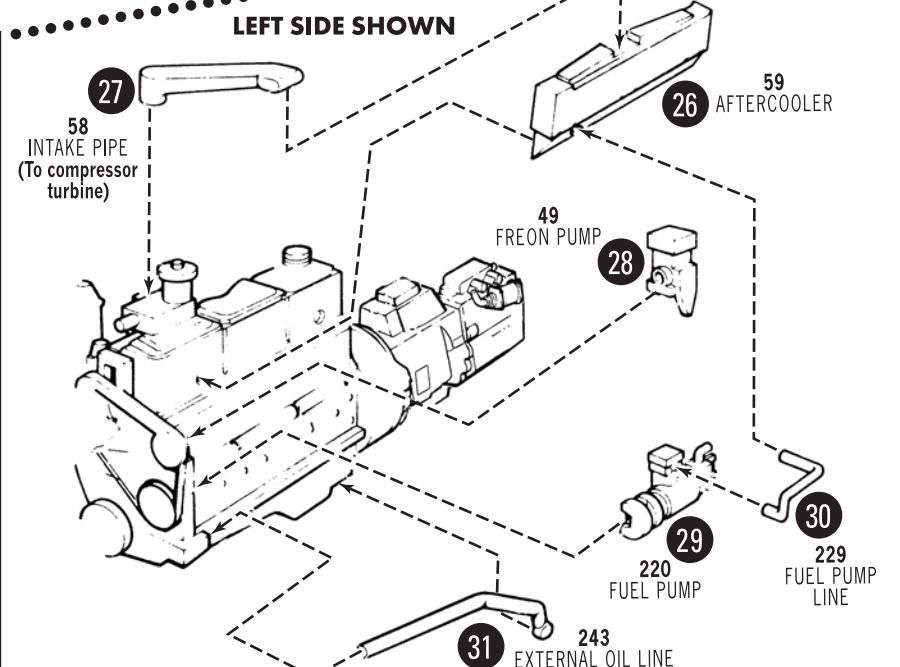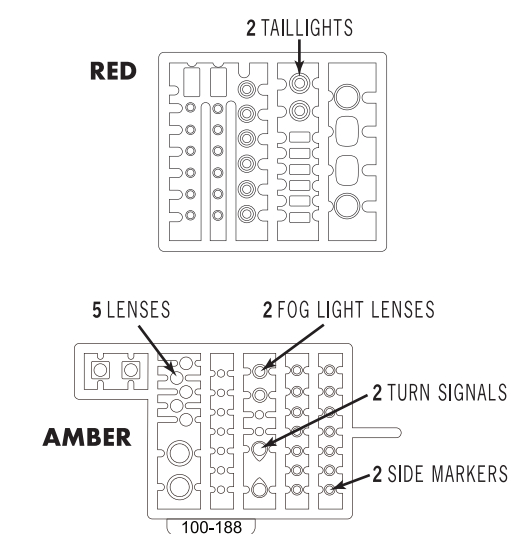


REAR WHEELS

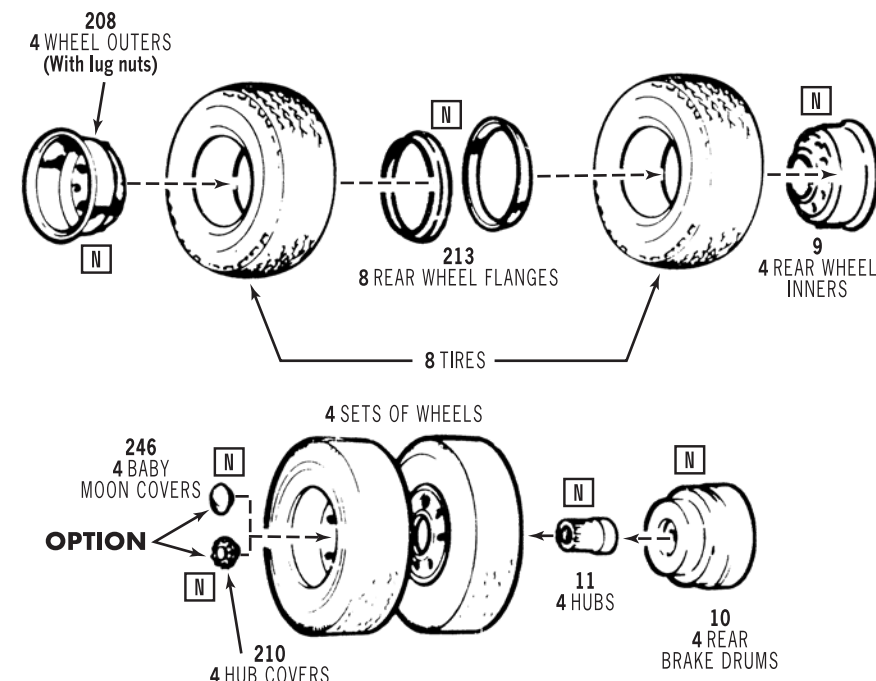


FRONT WHEELS

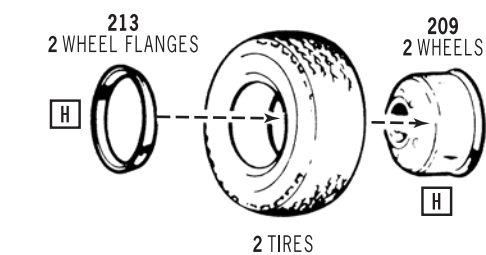


BASIC CHASSIS 1 - 13

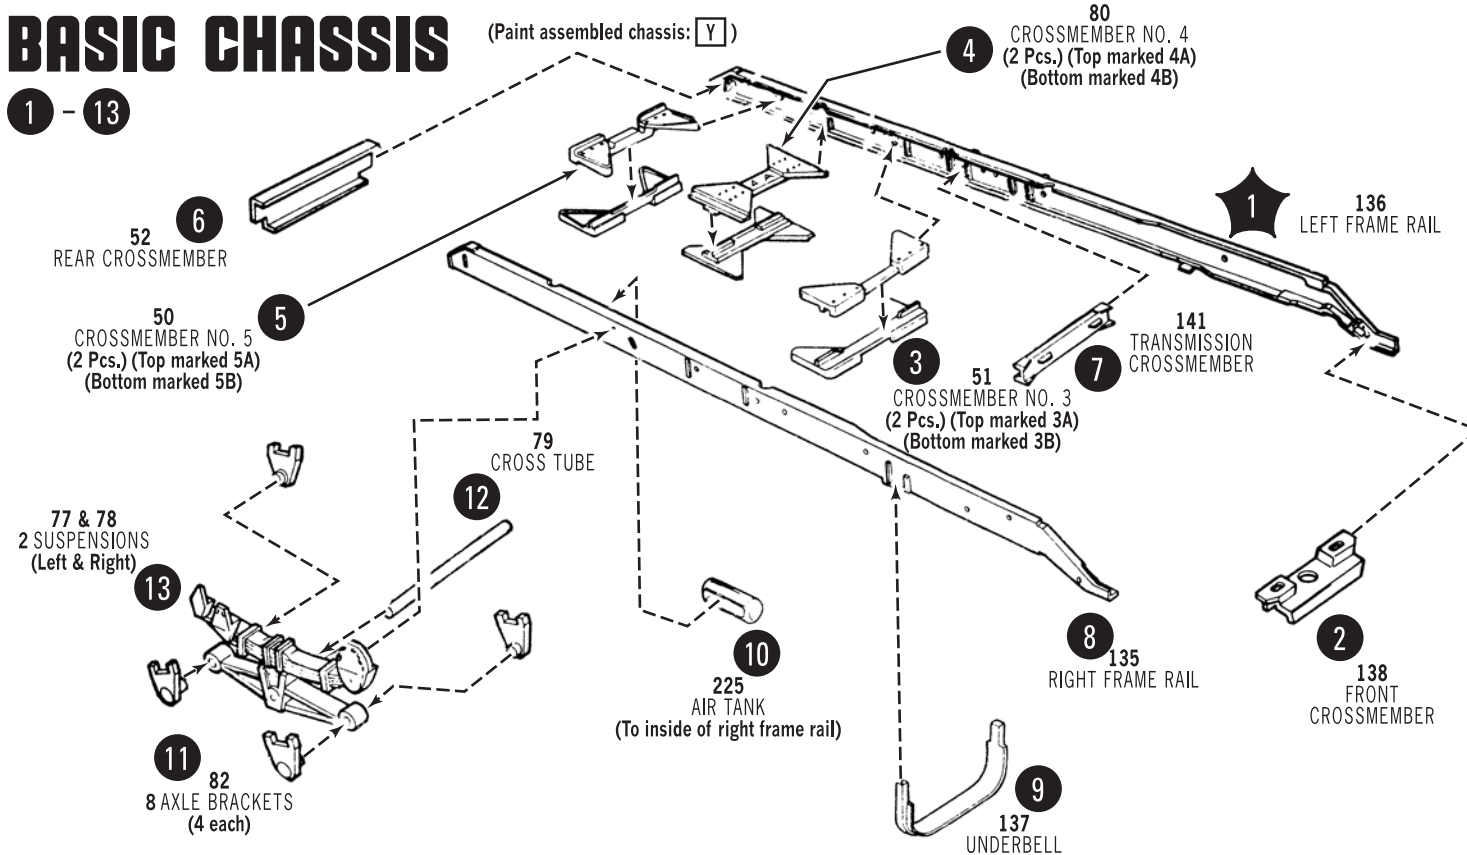


REAR DRIVE TRAIN 1 - 19

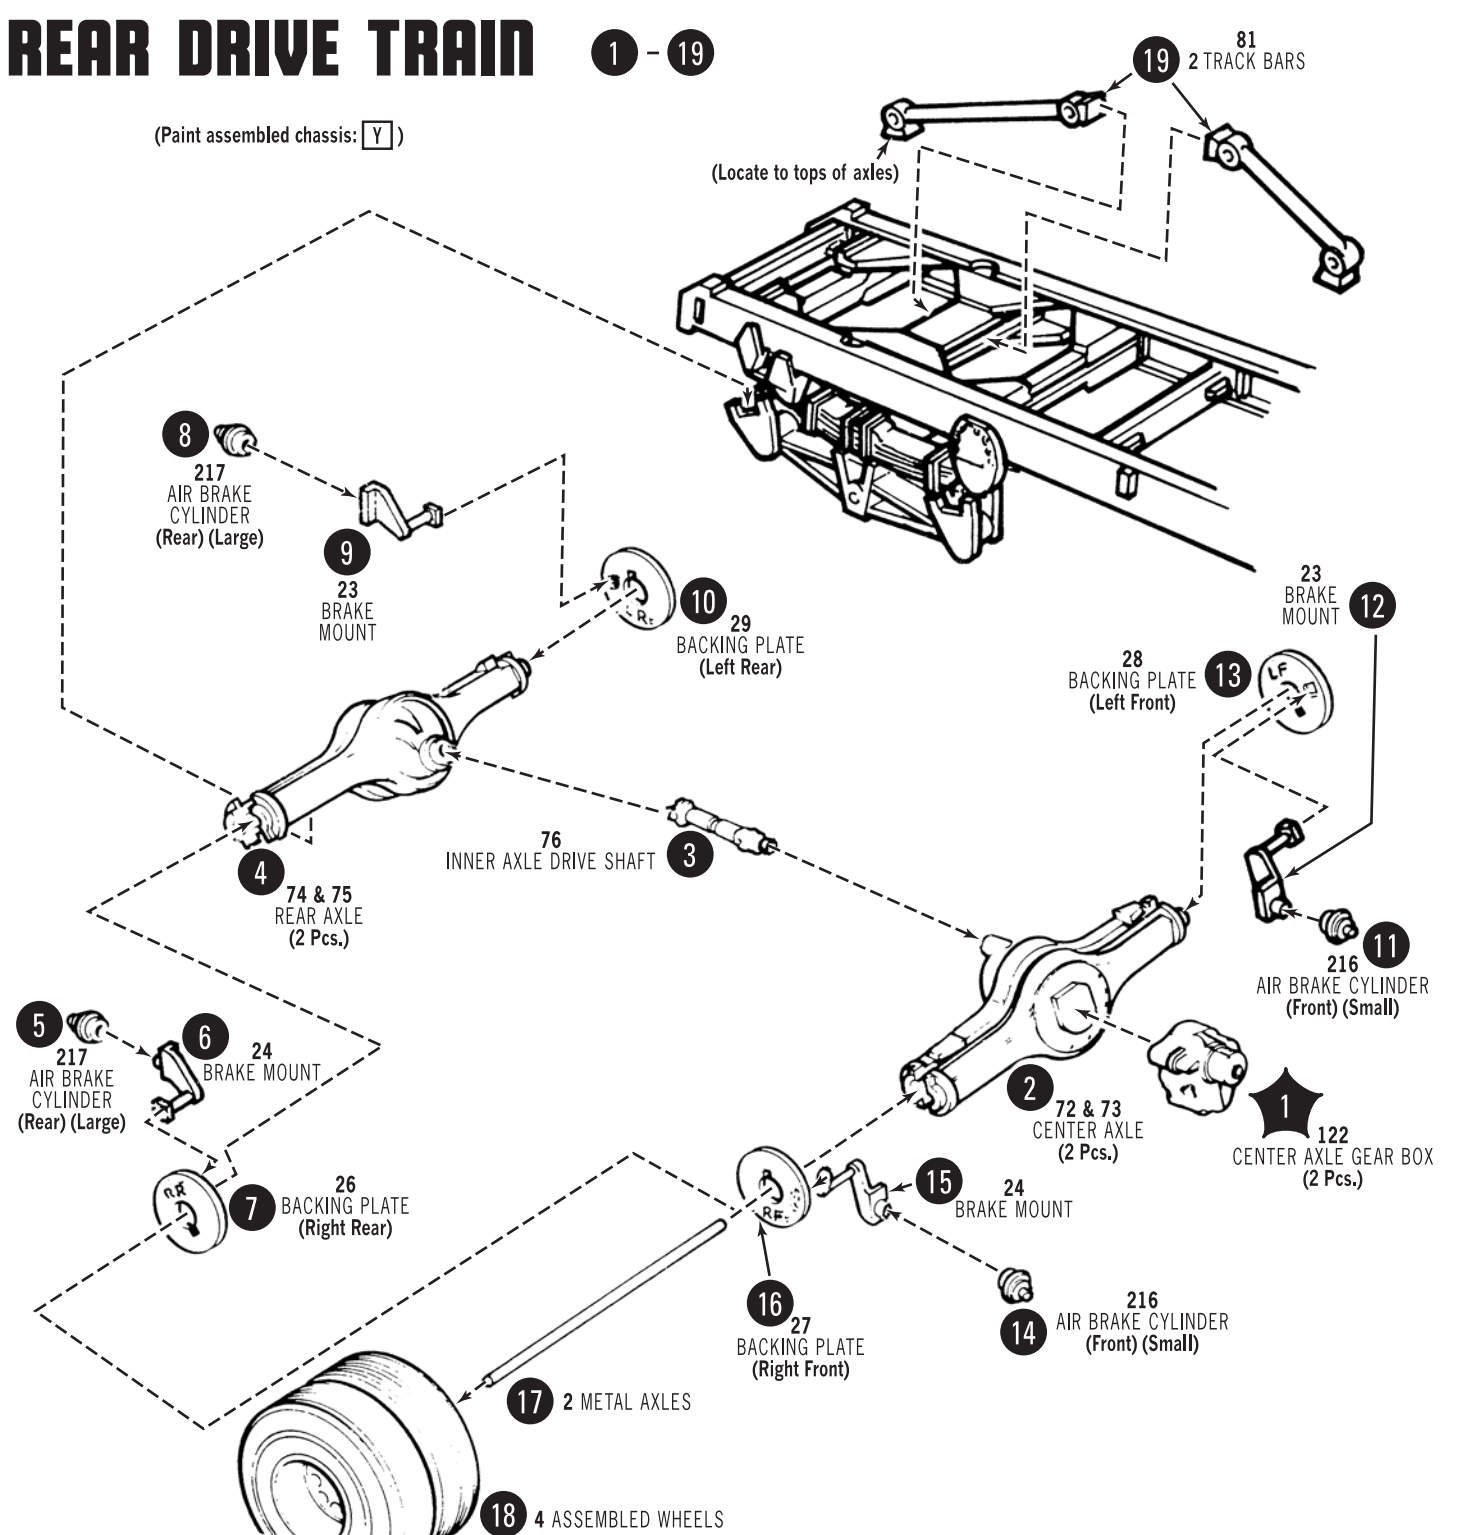



FRONT AXLE 1 - 13

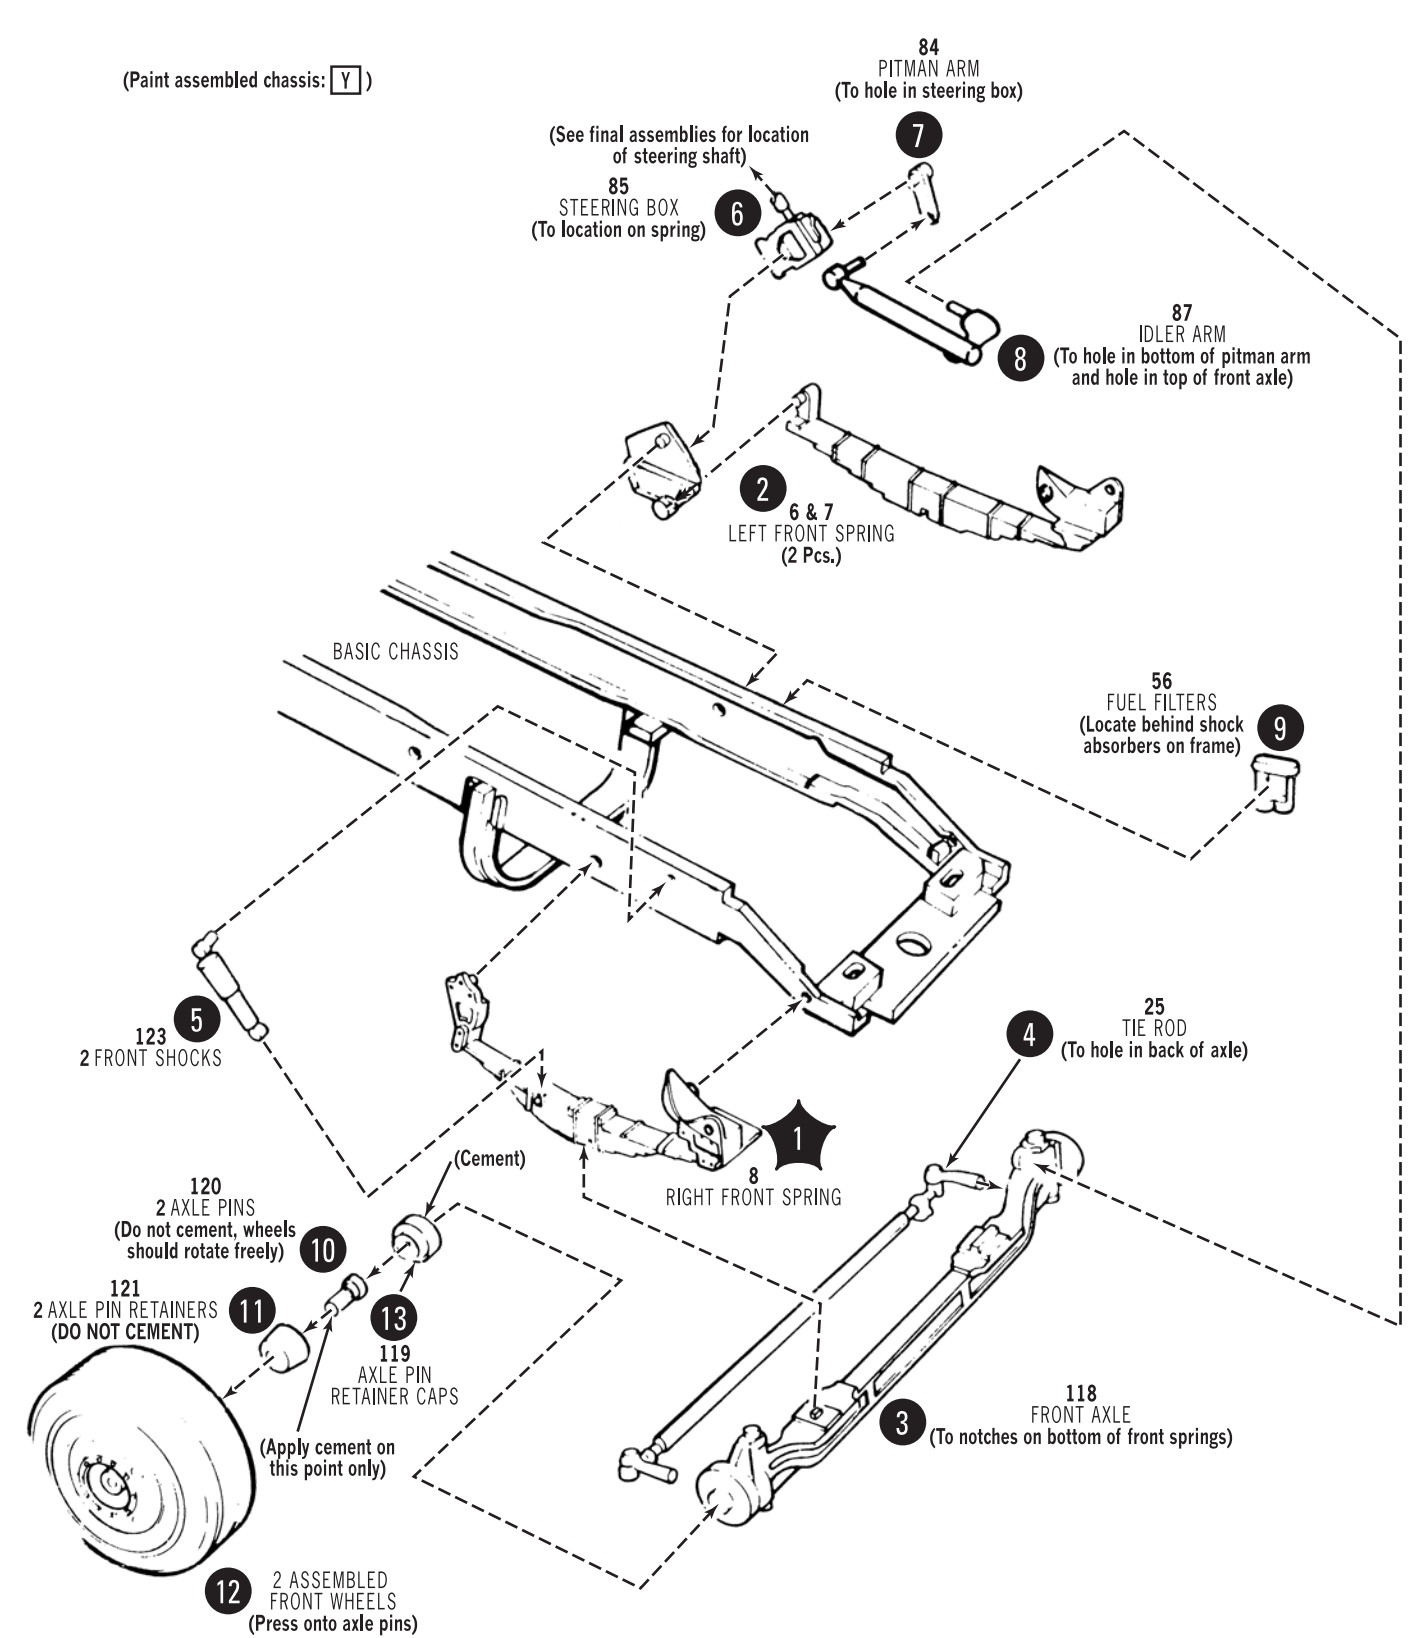


ENGINE TO CHASSIS 1 - 6

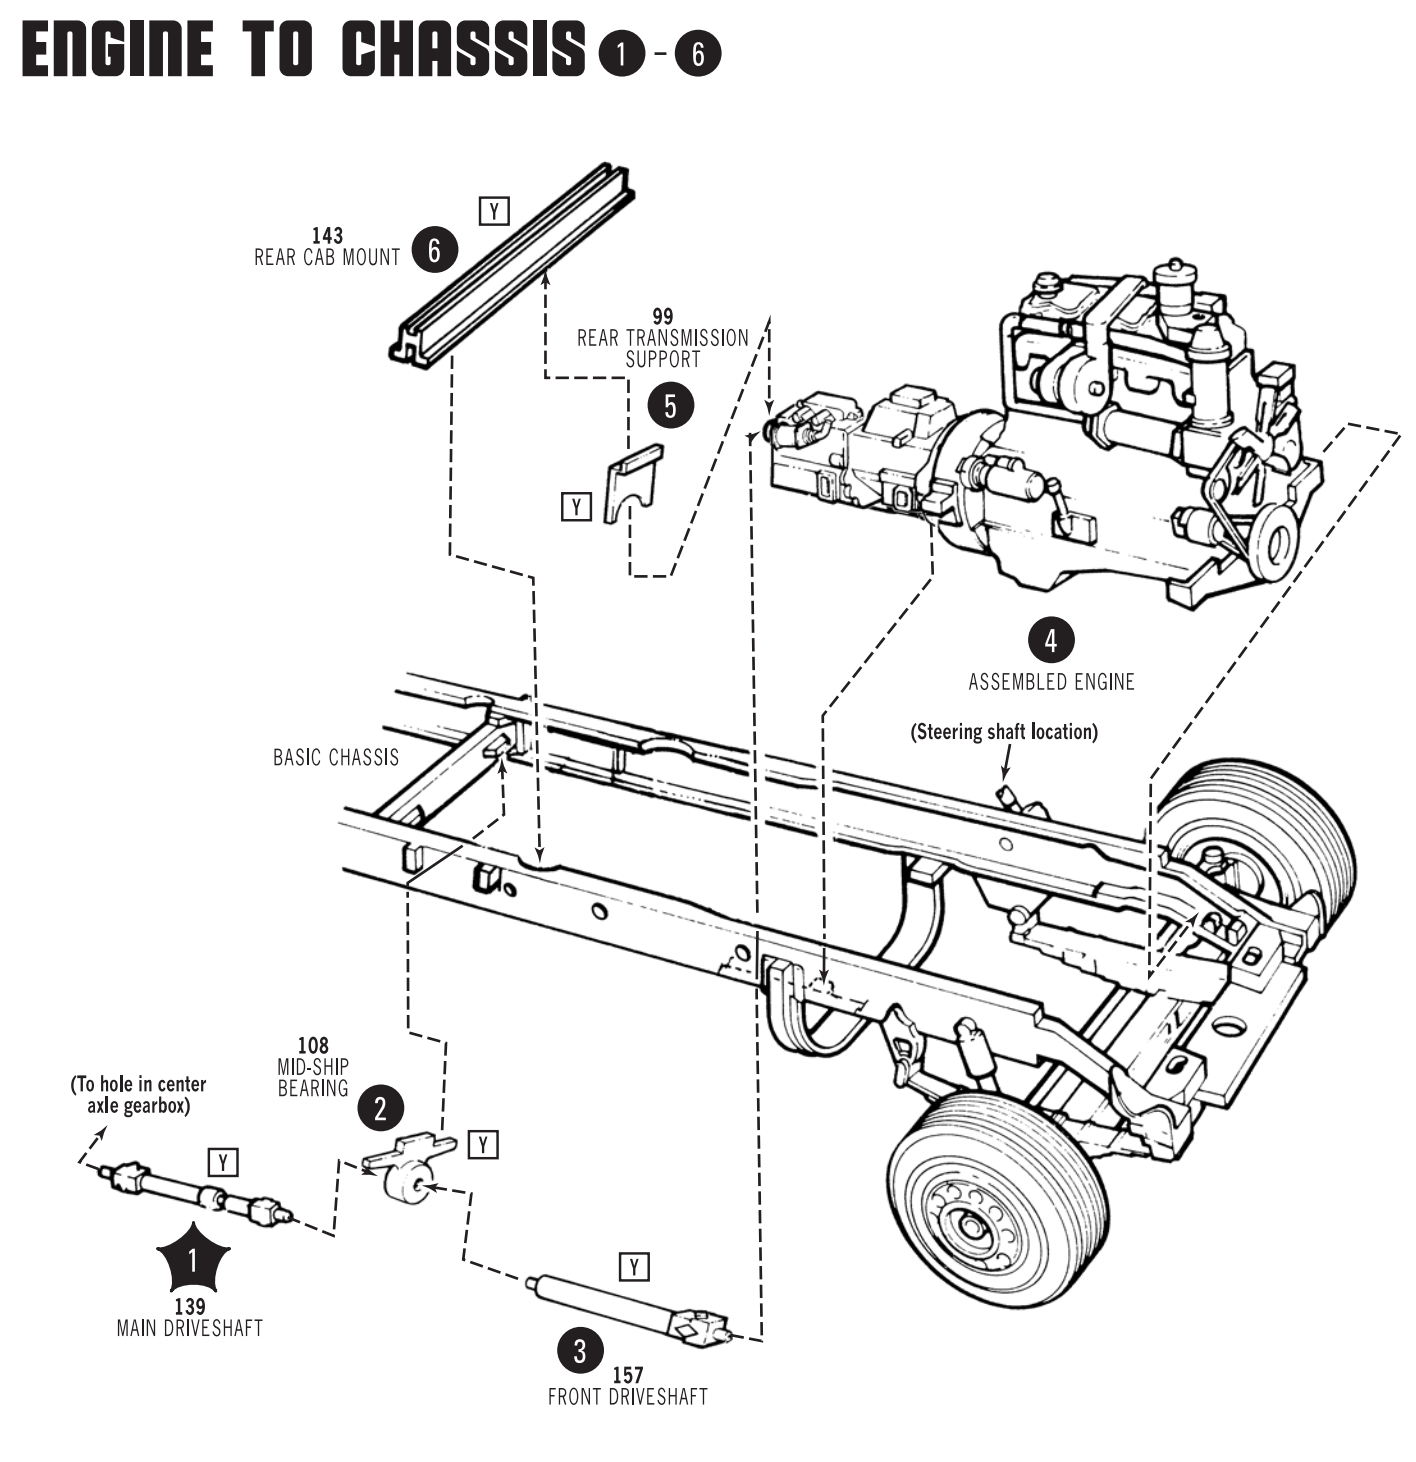

CHASSIS ACCESSORIES 1-22

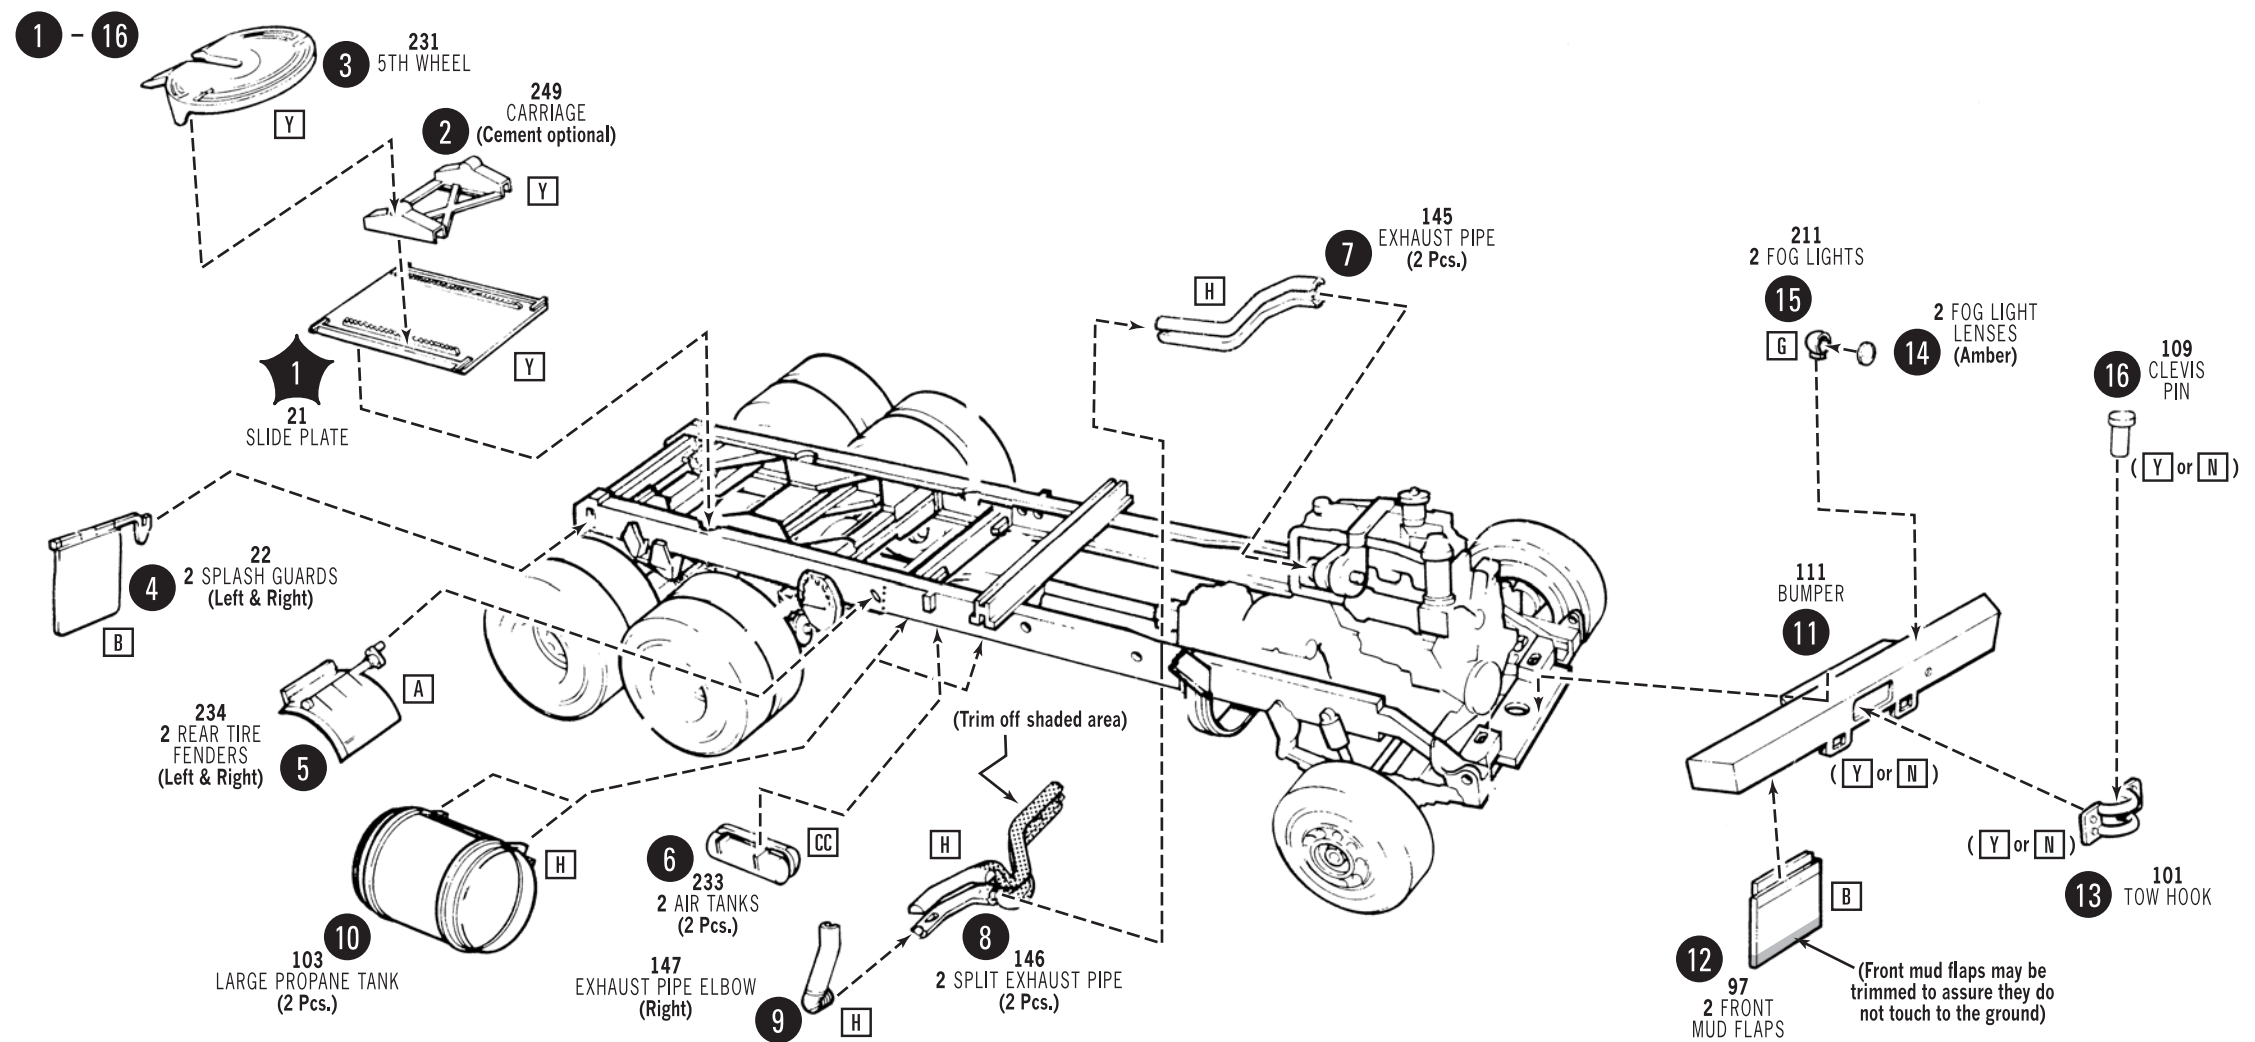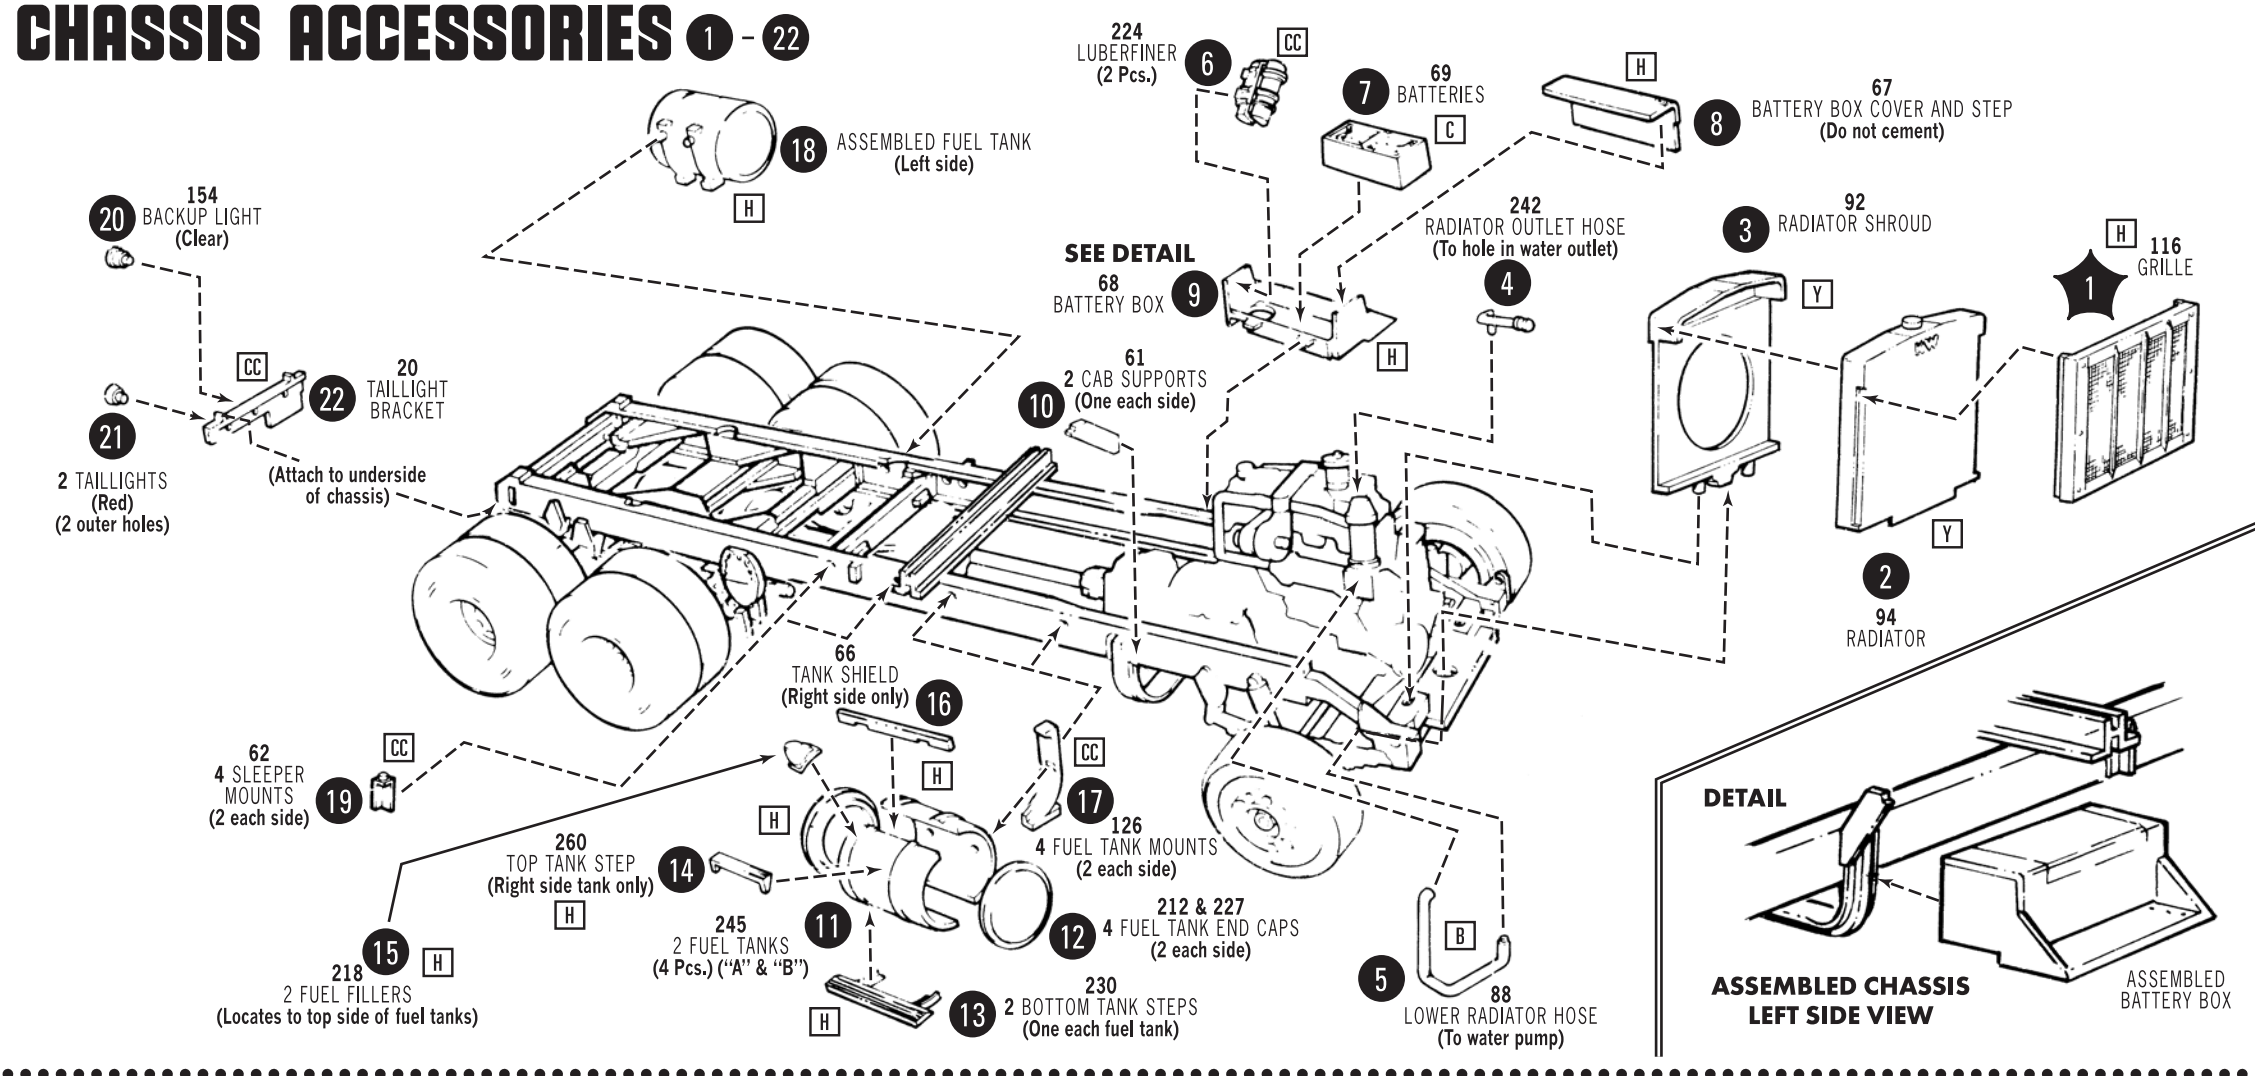


INTERIOR 1 - 19

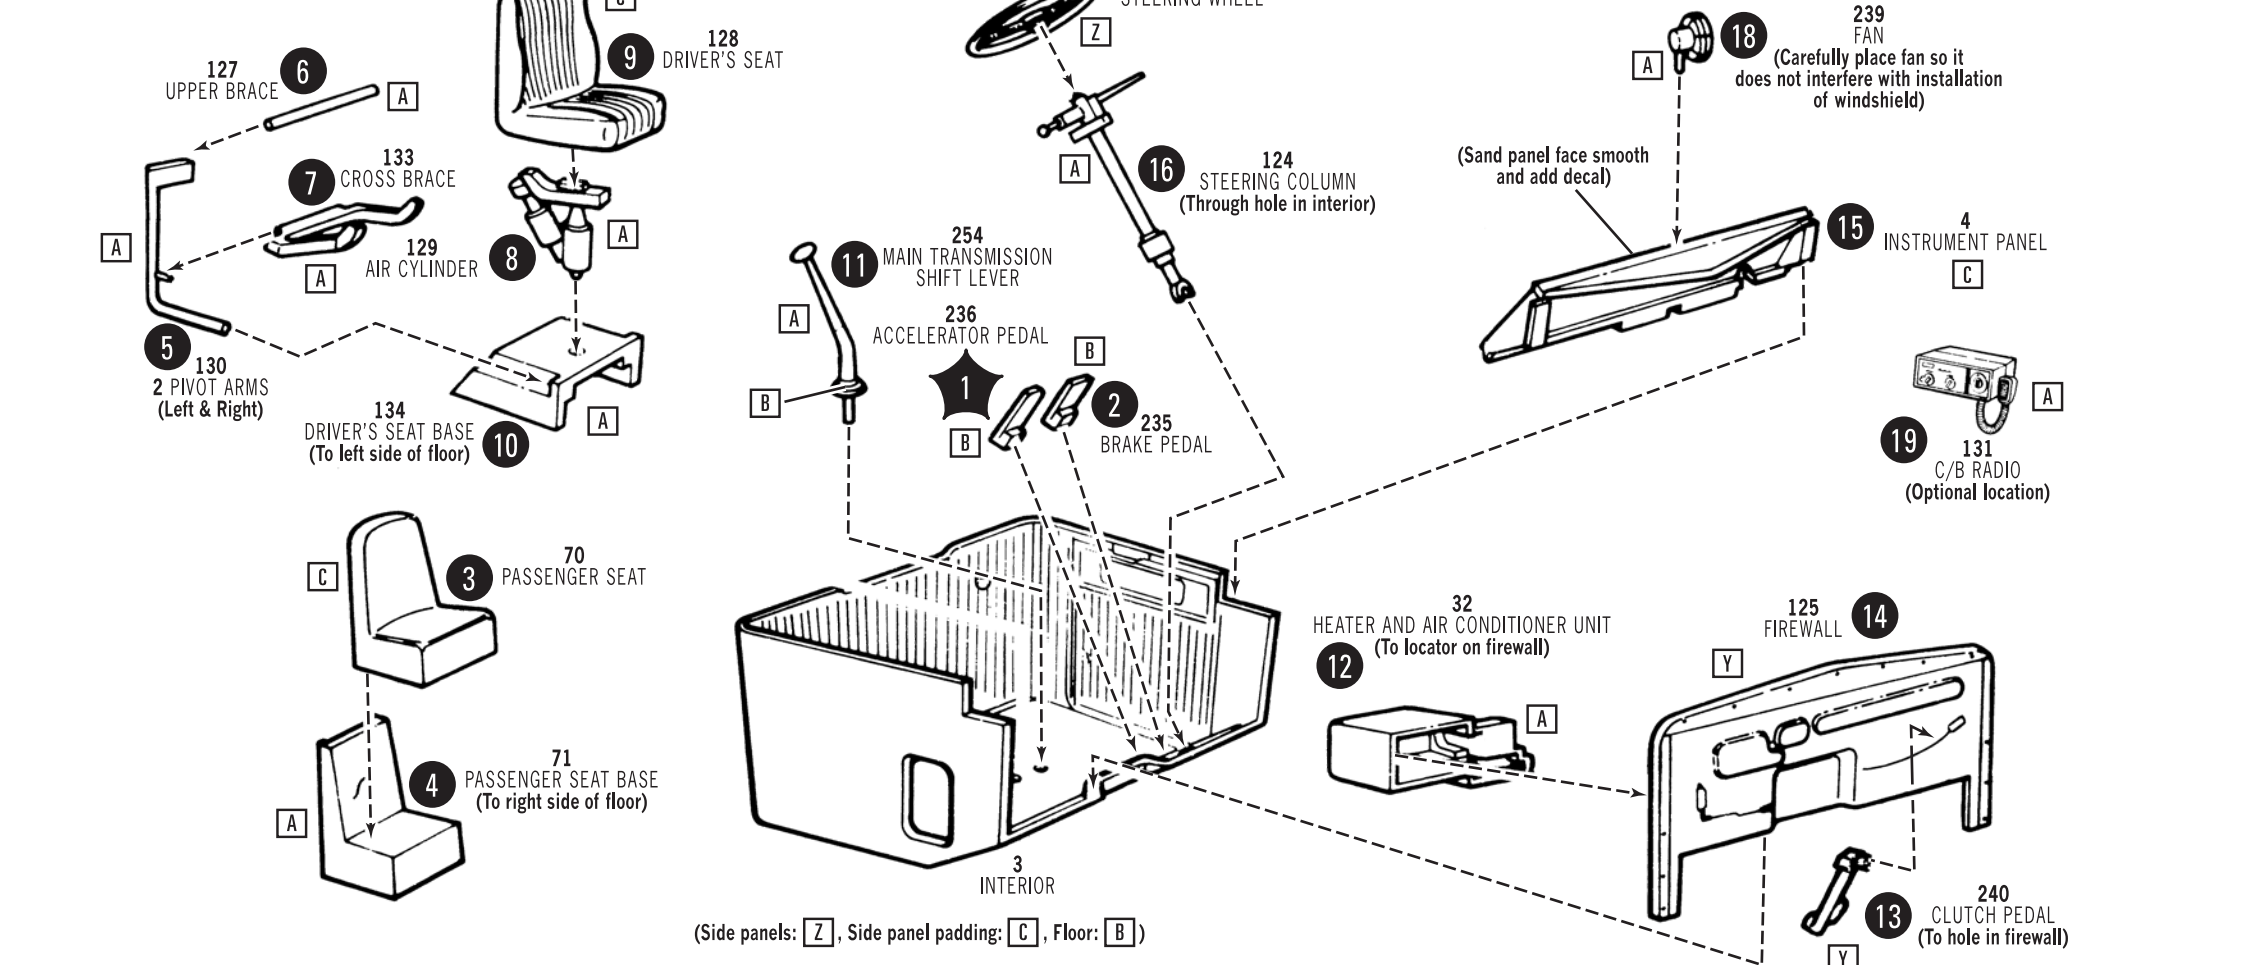


WINDOWS ①-⑥ INTERIOR TO CAB

NOTE: Clear rear window is not used for this build.

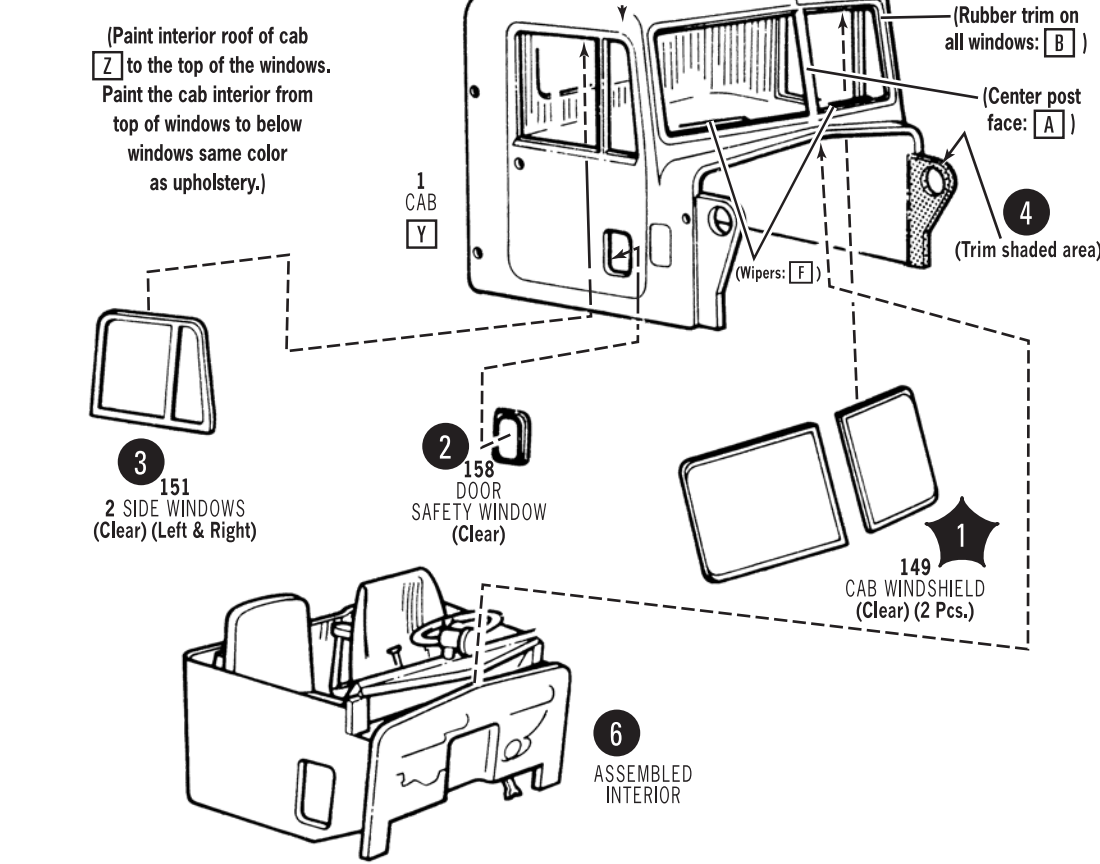

SLEEPER 1-6

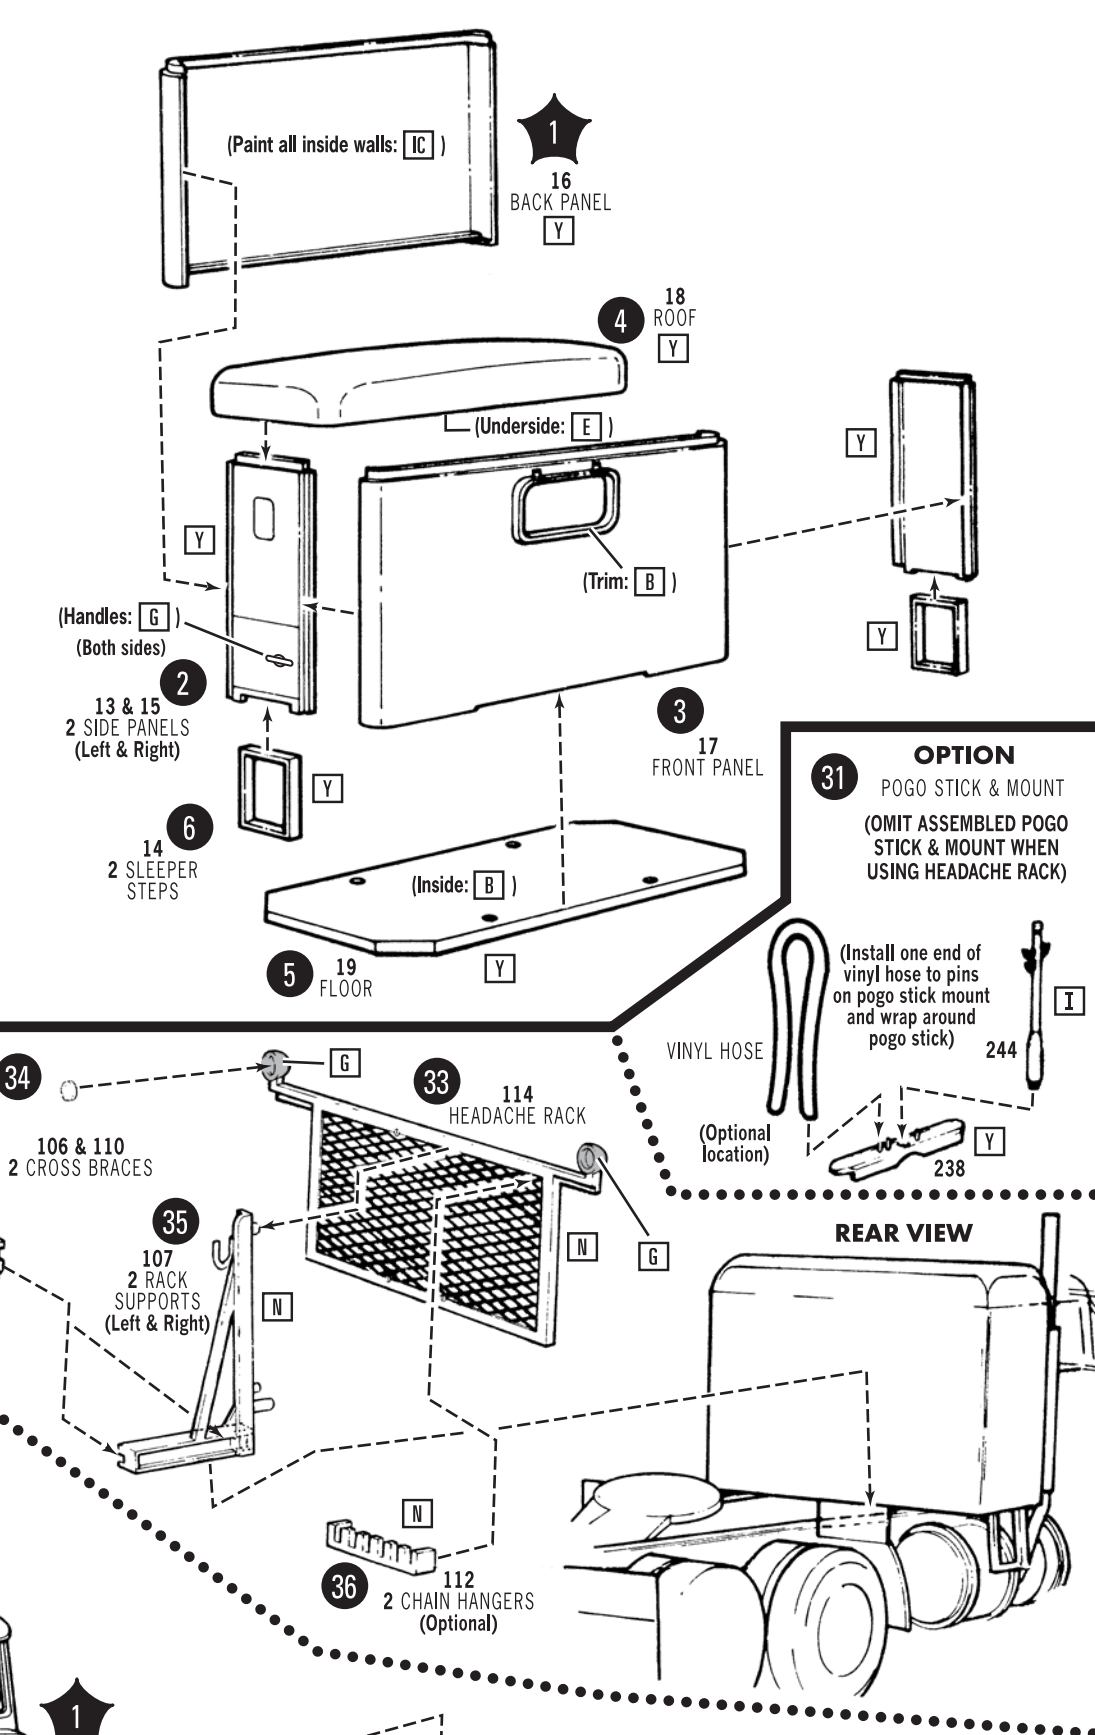

FINAL ASSEMBLIES 1 - 39

